

0 - Robotique et physical AI

- IA robotique - Architectures pour l'apprentissage profond
- Banc de machine learning avec SO-ARM101
- Assembler un PC d'IA en 2026
- Installation de machine avec RT Kernel et accélération graphique
- Machine Learning LeRobot avec SO-ARM101
- Démo AICA YOLO Portes Ouvertes 2026
- Machine Learning LeRobot avec SO-ARM101 - Legacy

IA robotique - Architectures pour l'apprentissage profond

Le contrôle d'un robot pour une application donnée au moyen d'un modèle de réseaux de neurones nécessite de fournir une quantité importante de données d'apprentissage. Ces données doivent permettre de comprendre comment résoudre la tâche, par exemple pour une tâche de saisie et dépose d'un objet (Pick and Place) elles doivent donc comporter :

- Comment bouge le robot et chacun de ses moteurs
- Comment bouge la pince
- Où sont placés les objets au début "problème"
- Où sont placés les objets à la fin "solution"

L'approche la plus répandue pour générer ces données d'apprentissage est la démonstration : le robot est "téléguidé" par un opérateur. On enregistre la trajectoire des servomoteurs ainsi qu'une ou plusieurs vidéos filmant les objets et le robot.

Bancs matériel de Machine Learning

Open ARM et open arm mini


<https://huggingface.co/spaces/lerobot/robot-folding>

- Follower : Open ARM modified by LeRobot
- <https://huggingface.co/datasets/lerobot/openarms-hardware-modifications>

 OpenArm



- Teleop : open-arms-mini
- <https://github.com/pkooij/open-arms-mini>
- 8x Feetech STS3215-C046 servo (7.4 V, 1:147)

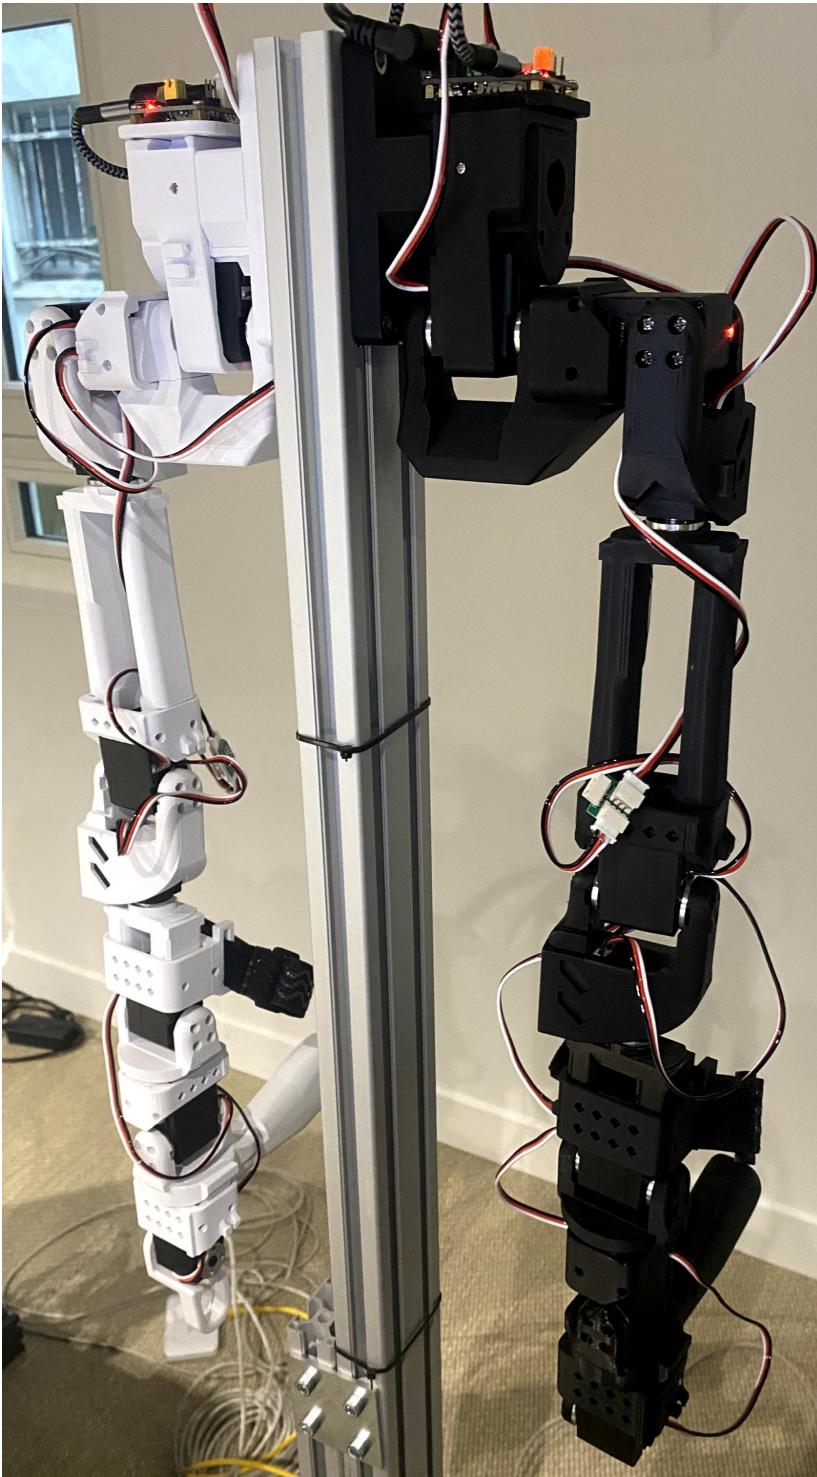

Koch

Robotis OMX

https://ai.robotis.com/omx/introduction_omx.html

LeRobot SO-ARM10X



Aloha Solo

Base : \$9,899.95

- WidowX Leader Arm (\$4,949.95)
- ViperX Follower Arm (\$7,149.95)
- 2x Intel RealSense D405 Cameras
- Portable Touchscreen Monitor
- Tripod, Cables, Accessories

tip
there, collect and
d the data you need!



<https://www.youtube.com/watch?v=hFqZJZ666Cw>



<https://www.trossenrobotics.com/aloha-solo>

Aloha Stationary

Without Laptop : \$30,799.98



Environnement logiciel de collecte de données

Hugging Face LeRobot - Python

Visualisation des DataSet : https://huggingface.co/spaces/lerobot/visualize_dataset

On note qu'il y a beaucoup de tests avec le SO-ARM10X. Mais pas d'homogénéité dans la collecte de données : les caméras sont placées la plupart du temps devant le robot, parfois sur la pince, et quasiment jamais avec le setup recommandé.

Rechercher des DataSet qui ont servi à entrainer des modèles disponibles publiés :

- https://huggingface.co/models?pipeline_tag=robotics&sort=trending
- Dans le panneau de droite > Sélectionner le filtre Reinforcement Learning > Robotics
- Beaucoup de DataSets sont uploadés mais peu de modèles entrainés le sont
- Par exemple on recherche les travaux de Rémi Cadene
 - Modèles : il y en a 4

https://huggingface.co/models?pipeline_tag=robotics&sort=trending&search=cadene

- DataSets : Il y en a beaucoup
https://huggingface.co/datasets?task_categories=task_categories:robotics&sort=trending&search=cadene
- Les Modèles entraînés avec le SO-ARM10 concernent la manipulation de Lego, par exemple le plus récent :
 - Modèle : https://huggingface.co/cadene/act_so100_5_lego_test_080000
 - DataSet pour le training : https://huggingface.co/datasets/cadene/so100_5_lego_test
 - DataSet pour l'évaluation du modèle :
https://huggingface.co/datasets/cadene/eval_act_so100_5_lego_test_080000

Setup similaires à celui du SO-ARM10X simple :

- Robot Koch : `/lerobot/koch_pick_place_1_lego`

Télécharger un DataSet :

https://github.com/huggingface/lerobot/blob/a1daeaf0c4ae345df9b2f5b862f091ce158e4446/examples/1_load_lerobot_dataset.py

Rejouer les épisodes d'un DataSet :

https://github.com/huggingface/lerobot/blob/a1daeaf0c4ae345df9b2f5b862f091ce158e4446/examples/12_use_so101.md#replay-an-episode

Evaluer un modèle pré-entraîné :

https://github.com/huggingface/lerobot/blob/a1daeaf0c4ae345df9b2f5b862f091ce158e4446/examples/2_evaluate_pretrained_policy.py

Trossen Robotics Interbotix - ROS, Python,

Banc de machine learning avec SO-ARM101

Assemblage et démarrage du SO-ARM101

Configurer les servomoteurs

La carte `FE-URT-1` fournie par Feetech n'est pas détectée sous Ubuntu à cause d'un conflit avec un paquet de brail. On le désinstalle :

```
sudo apt-get autoremove brltty
```

<https://askubuntu.com/questions/1321442/how-to-look-for-ch340-usb-drivers/1472246#1472246>

https://github.com/huggingface/lerobot/blob/main/examples/10_use_so100.md#c-configure-the-motors

- Brancher la carte
- Trouver l'interface USB sur laquelle est branchée la carte

```
python lerobot/scripts/find_motors_bus_port.py
```

- Sous Linux, par ex. `/dev/ttyACM0` ou `/dev/ttyUSB0`
- Sous Windows, par ex. `COM13` ou `COM14`
- Sous Linux, Changer les droits sur les interfaces USB

```
sudo chmod 666 /dev/ttyACM0
sudo chmod 666 /dev/ttyACM1
```

- Ouvrir Codium > File > Open Folder > `admin_ros/Lerobot`
- Modifier le fichier de config

```
gedit ~/lerobot/lerobot/common/robot_devices/robots/configs.py
```

- Chercher la config du So100 en ligne 436 `class So100RobotConfig(ManipulatorRobotConfig):`
- Remplacer `port="/dev/tty.usbmodem58760431091",` pour le `leader_arms` (L446) et le `follower_arms` (L463) par le port découvert

- Brancher les servos un à un à la carte puis lancer le script d'initialisation, en incrémentant l'ID à chaque fois :

```
python lerobot/scripts/configure_motor.py \  
  --port /dev/tty.usbmodem58760432961 \  
  --brand feetech \  
  --model sts3215 \  
  --baudrate 1000000 \  
  --ID 1
```

- Au fur et à mesure les brancher en série et/ou noter l'ID sur le moteur
- Les servos sont bougés à leur position centrale et l'offset mis à 0

Ne plus bouger les servos jusqu'à l'assemblage

Construction et assemblage mécanique

Une version 101 est sortie en 05/2025. Le Leader est plus simple à assembler, et plus besoin de [démonter les servos pour enlever un engrenage et les rendre passifs](#). Il suffit d'acheter le kit de 6 servos avec 3 rapports de transmission différents :


- <https://github.com/TheRobotStudio/SO-ARM100?tab=readme-ov-file#getting-your-own-so101>
- https://www.alibaba.com/product-detail/6PCS-7-4V-STS3215-Servos-for_1601428584027.html?spm=a2747.product_manager.0.0.757c2c3cIU7uH3
- Imprimer la mâchoire statique intégrant le support de caméra : https://github.com/TheRobotStudio/SO-ARM100/blob/main/Optional/Wrist_Cam_Mount_32x32_UVC_Module/README.md
- Suivre le guide d'assemblage pour le SO101 : <https://huggingface.co/docs/lerobot/so101#step-by-step-assembly-instructions>
- Pour le SO100 : <https://huggingface.co/docs/lerobot/so100#step-by-step-assembly-instructions>

Astuces pour l'assemblage

- Mettre une vis sur l'arbre moteur et l'axe passif (à l'opposée de l'arbre moteur) quand il y a la place d'en mettre une (vérifier qu'il y aura la place après assemblage des éléments autour du moteur)
- Ne plus bouger les servos après leur initialisation qui les met à l'angle 0. Dans l'idéal, assembler les éléments de manière à ce que le robot soit en configuration initiale avec

tous les moteurs à 0

- En pratique, on monte le robot dans la configuration ci-dessous. C'est l'étape de calibration qui permettra de définir un offset pour que le zéro des moteurs corresponde au modèle cinématique du SO-ARM10X

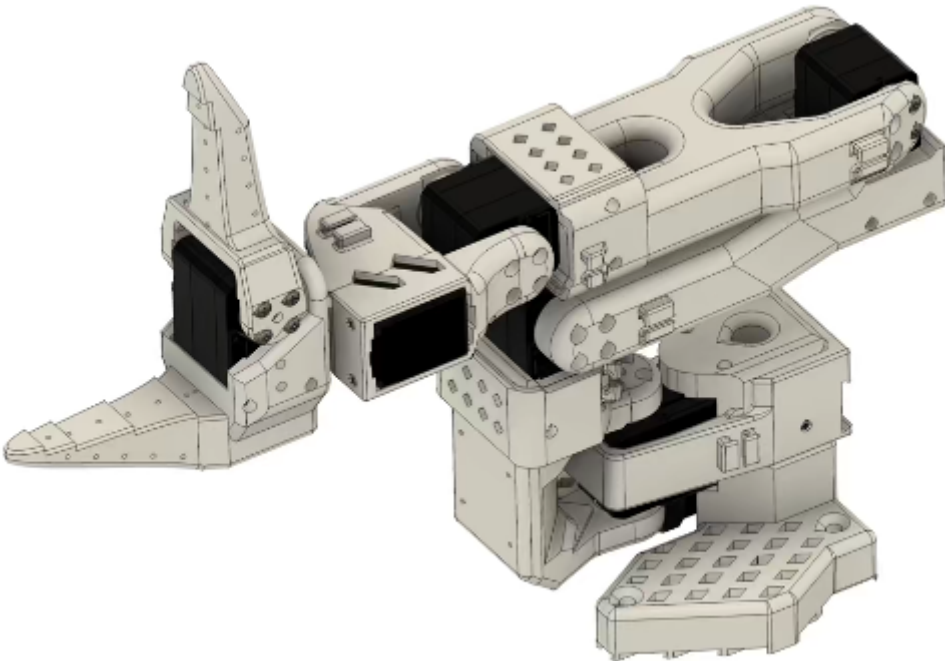

- Il est possible d'ajouter un offset dans la configuration des servomoteurs, par exemple via les scripts du projet LeRobot
- Attention si vous démarrez le robot sous ROS avant d'avoir lancé la calibration LeRobot qui fixe l'Offset dans les servomoteurs, vous risquez de casser le robot


Banc de Machine Learning LeRobot

Agencement des caméras et robots

Le nombre, le positionnement et la qualité des caméras sont importants pour la qualité du DataSet :

- Plusieurs setup sont proposés :
 - Caméras d'environnement : <https://github.com/TheRobotStudio/SO-ARM100?tab=readme-ov-file#2-overhead-camera-mount>
 - Caméras de poignet : <https://github.com/TheRobotStudio/SO-ARM100?tab=readme-ov-file#5-wristmount-cameras>
- Attention au champ de vision des caméras si vous prenez une de vos webcams
 - Il risque de ne pas être assez "fish eye"
 - Par exemple, la WebCam Logitech C270 (720p) a un champ trop étroit pour être intégrée au [module Overhead](#)

Au FabLab de IUT Haguenau

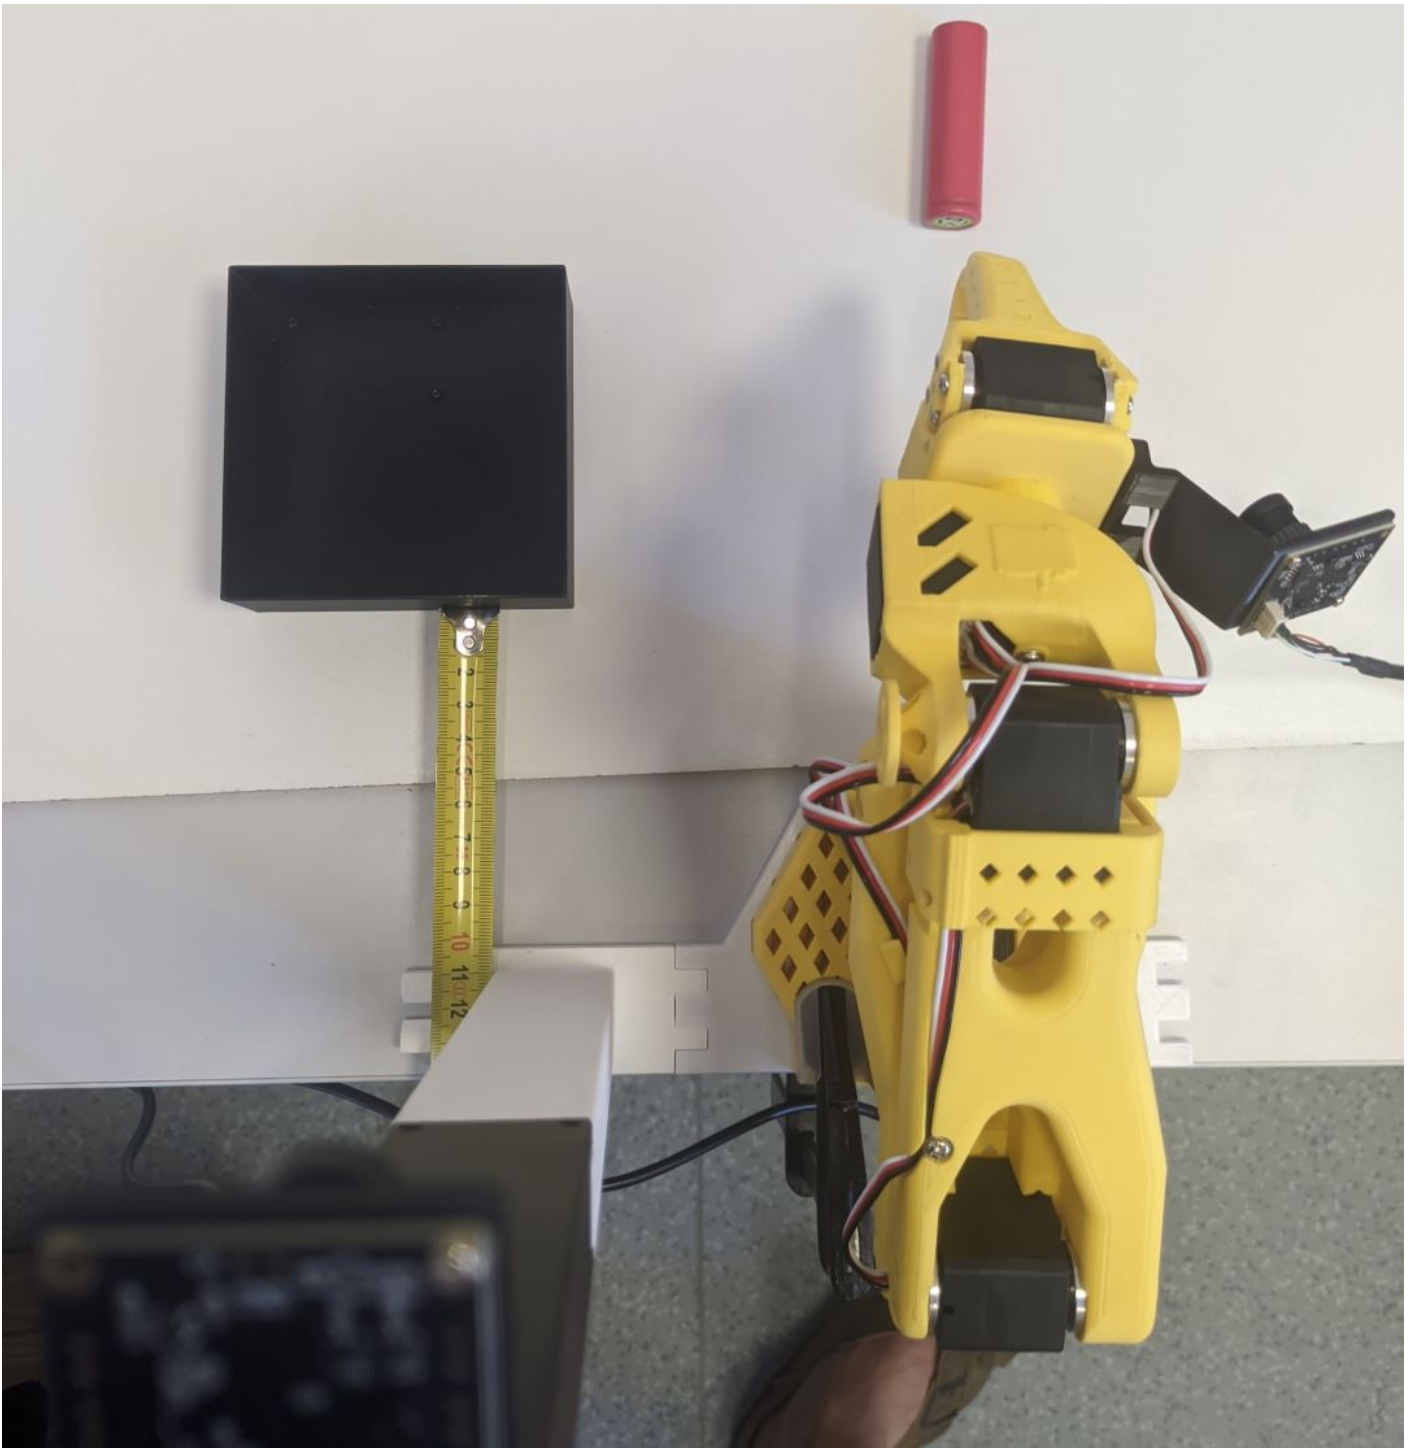

- On choisit de prendre deux caméras au format 32 x 32 , la version 1080p permet d'augmenter la qualité du DataSet
 - <https://www.amazon.com/innomaker-Computer-Raspberry-Support-Windows/dp/B0CNCSFQC1/132-7372155-9780230>
- Imprimer et assembler la mâchoire statique intégrant le support de caméra :
https://github.com/TheRobotStudio/SO-ARM100/blob/main/Optional/Wrist_Cam_Mount_32x32_UVC_Module/README.md

- Imprimer et assembler le support de robot et de caméra Overhead :

<https://github.com/TheRobotStudio/SO->

[ARM100/blob/main/Optional/Overhead_Cam_Mount_32x32_UVC_Module/README.md](https://github.com/TheRobotStudio/SO-ARM100/blob/main/Optional/Overhead_Cam_Mount_32x32_UVC_Module/README.md)

Calibration des caméras

<https://huggingface.co/docs/lerobot/cameras>

Assembler un PC d'IA en 2026

Usages :

- Serveur pour enseignement robotique et IA
- Pilotage de robots temps-réel avec ROS2
- Inférence de larges modèles d'IA, ex.
- Fine-tuning de modèles d'IA, ex. LeRobot

Configuration pour un total d'environ 1500€ :

- Carte graphique Nvidia RTX 5070 Ti 16GB (~900€)
- Processeur AMD AM5 Ryzen 7 7700 (~190€)
 - https://www.reddit.com/r/MSI_Gaming/comments/1090yb6/65w_ryzen_7_7700_performance_scaling_with_pbo/
- Carte mère moyenne gamme (~150€) AMD AM5 PCIe 5.0 x16 b650/e
 - <https://pausehardware.com/comparatif-des-chipsets-amd-x870-x670-b650-ryzen/>
 - <https://www.cdiscount.com/mp-267-asu1705279946652.html>
 - <https://www.pccomponentes.fr/carte-mere-gigabyte-b650e-eagle-amd-b650-socket-am5-ddr5-atx-wifi-6e-pcie-50-raid-rgb>
 - <https://www.pccomponentes.fr/carte-mere-asus-tuf-gaming-b650e-plus-wifi-b650-am5-ddr5-atx-wifi-6e-pcie-50-raid>
 - 1 x PCIe 5.0 x16 @CPU
 - 1 x PCIe 4.0 x16 (max. @x1) @PCH
 - 3 x M2 (1 x PCIe 5.0 et 2 x PCIe 4.0)
 - 1 x USB 20GBps
 - 4 x ports SATA
 - Wi-Fi 6E, Ethernet Realtek 2,5 Gbit
 - 4 x DDR5
- 64GB DDR5 5600 MHz
- Alimentation 750-850W 80+ Gold
- Boîtier silencieux Antec P10C silent

5070 Ti

- Installer nvidia-driver >570 et linux-kernel >6.11
- Installer la version open du driver : `nvidia-driver-570-open`

Donc par exemple :

```
export distro="ubuntu2404"
export arch="x86_64"
export version="570"
wget https://developer.download.nvidia.com/compute/cuda/repos/$distro/$arch/cuda-keyring_1.1-1_all.deb
sudo dpkg -i cuda-keyring_1.1-1_all.deb
sudo apt update
sudo apt install nvidia-driver-pinning-$version
sudo IGNORE_PREEMPT_RT_PRESENCE=1 apt install cuda-drivers nvidia-driver-$version-open
```

Benchmark glmark2 en résolution 1920x1080 <https://openbenchmarking.org/test/pts/glmark2>

```
glmark2 -s 1920x1080
=====
glmark2 2023.01
=====

OpenGL Information
GL_VENDOR:      NVIDIA Corporation
GL_RENDERER:    NVIDIA GeForce RTX 5070 Ti/PCIe/SSE2
GL_VERSION:     4.6.0 NVIDIA 570.211.01
Surface Config: buf=32 r=8 g=8 b=8 a=8 depth=24 stencil=0 samples=0
Surface Size:   1920x1080 windowed
=====

[build] use-vbo=false: FPS: 17118 FrameTime: 0.058 ms
[build] use-vbo=true: FPS: 29160 FrameTime: 0.034 ms
[texture] texture-filter=nearest: FPS: 24267 FrameTime: 0.041 ms
[texture] texture-filter=linear: FPS: 29185 FrameTime: 0.034 ms
[texture] texture-filter=mipmap: FPS: 29395 FrameTime: 0.034 ms
[shading] shading=gouraud: FPS: 28971 FrameTime: 0.035 ms
[shading] shading=blinn-phong-inf: FPS: 28964 FrameTime: 0.035 ms
[shading] shading=phong: FPS: 28750 FrameTime: 0.035 ms
[shading] shading=cel: FPS: 28703 FrameTime: 0.035 ms
[bump] bump-render=high-poly: FPS: 26538 FrameTime: 0.038 ms
[bump] bump-render=normals: FPS: 29854 FrameTime: 0.033 ms
[bump] bump-render=height: FPS: 29795 FrameTime: 0.034 ms
[effect2d] kernel=0,1,0;1,-4,1;0,1,0;: FPS: 25300 FrameTime: 0.040 ms
```

```

[effect2d] kernel=1,1,1,1,1;1,1,1,1,1;1,1,1,1,1,: FPS: 19425 FrameTime: 0.051 ms
[pulsar] light=false:quads=5:texture=false: FPS: 27432 FrameTime: 0.036 ms
[desktop] blur-radius=5:effect=blur:passes=1:separable=true:windows=4: FPS: 9557 FrameTime:
0.105 ms
[desktop] effect=shadow:windows=4: FPS: 17248 FrameTime: 0.058 ms
[buffer] columns=200:interleave=false:update-dispersion=0.9:update-fraction=0.5:update-
method=map: FPS: 3425 FrameTime: 0.292 ms
[buffer] columns=200:interleave=false:update-dispersion=0.9:update-fraction=0.5:update-
method=subdata: FPS: 3852 FrameTime: 0.260 ms
[buffer] columns=200:interleave=true:update-dispersion=0.9:update-fraction=0.5:update-
method=map: FPS: 4847 FrameTime: 0.206 ms
[ideas] speed=duration: FPS: 24299 FrameTime: 0.041 ms
[jellyfish] <default>: FPS: 20993 FrameTime: 0.048 ms
[terrain] <default>: FPS: 2663 FrameTime: 0.376 ms
[shadow] <default>: FPS: 17595 FrameTime: 0.057 ms
[refract] <default>: FPS: 6201 FrameTime: 0.161 ms
[conditionals] fragment-steps=0:vertex-steps=0: FPS: 28276 FrameTime: 0.035 ms
[conditionals] fragment-steps=5:vertex-steps=0: FPS: 28159 FrameTime: 0.036 ms
[conditionals] fragment-steps=0:vertex-steps=5: FPS: 23158 FrameTime: 0.043 ms
[function] fragment-complexity=low:fragment-steps=5: FPS: 24062 FrameTime: 0.042 ms
[function] fragment-complexity=medium:fragment-steps=5: FPS: 27253 FrameTime: 0.037 ms
[loop] fragment-loop=false:fragment-steps=5:vertex-steps=5: FPS: 28133 FrameTime: 0.036 ms
[loop] fragment-steps=5:fragment-uniform=false:vertex-steps=5: FPS: 28144 FrameTime: 0.036 ms
[loop] fragment-steps=5:fragment-uniform=true:vertex-steps=5: FPS: 28068 FrameTime: 0.036 ms
=====
                                glmark2 Score: 22083
=====

```

Config laptop

- suspend-then-hibernate swap partition
 - <https://forums.linuxmint.com/viewtopic.php?t=388398>
 - <https://forums.linuxmint.com/viewtopic.php?t=287015>
 - <https://forums.linuxmint.com/viewtopic.php?t=322002>

Installation de machine avec RT Kernel et accélération graphique

Déploiement avec FAI-Project

<https://fai-project.org/FAIme/>

- Sélectionner Ubuntu
- Basculer en mode avancé en cliquant sur Toggle
- Si le mdp est laissé vide, ce sera le code du projet FAI
- Choisir un utilisateur, par ex. `etudiant`
- Attention si vous choisissez US, le clavier sera QWERTZ

Your job BYDEGIKS is currently being processed. <https://fai-project.org/myimages/BYDEGIKS>

Your web config:

```
type="install"
partition="ONE"
desktop="XORG"
suite="ubuntu"
keyboard="fr"
addpkgs="software-properties-common terminator nano http wget curl gpg apt-transport-https python3
email="robotics@hentz.eu"
rootpw=' '
username="etudiant"
userpw=' '
gitttype=""
gituser=""
repo="deb [trusted=yes] http://download.docker.com/linux/ubuntu noble stable"
postinst="install_pc_aica.sh"
rclocal="1"
datapart=""
cmdline=""
```

```
options="STANDARD REBOOT RECOMMENDS"
```

```
curl "https://fai-  
project.org/cgi/faime.cgi?type=install;username=etudiant;partition=ONE;repo=http%3A%2F%2Fdownload.d  
ocker.com%2Flinux%2Fubuntu%20noble%20stable;keyboard=fr;suite=ubuntu;desktop=XORG;cl6=STANDARD;addp  
kgs=software-properties-common%20terminator%20nano%20htop%20wget%20curl%20gpg%20apt-transport-  
https%20python3-rosdep2%20ubuntu-realtime%20docker-ce%20docker-ce-cli%20containerd.io%20docker-  
buildx-plugin%20docker-compose-  
plugin;cl9=RECOMMENDS;email=robotics%40hentz.eu;postinst=install_pc_aica.sh;rclocal=1;cl8=REBOOT;sb  
m=2"
```

```
sudo apt install ubuntu-realtime  
sudo nano /etc/default/grub  
sudo update-grub  
uname -v | cut -d" " -f1-4  
sudo apt install cpufrequtils  
sudo systemctl disable ondemand  
sudo systemctl enable cpufrequtils  
sudo sh -c 'echo "GOVERNOR=performance" > /etc/default/cpufrequtils'  
sudo systemctl daemon-reload && sudo systemctl restart cpufrequtils  
sudo systemctl status docker  
cpufreq-info  
  
wget <https://developer.download.nvidia.com/compute/cuda/repos/ubuntu2404/x86_64/cuda-  
keyring_1.1-1_all.deb>  
sudo dpkg -i cuda-keyring_1.1-1_all.deb  
sudo apt update  
sudo apt install nvidia-driver-pinning-570  
sudo IGNORE_PREEMPT_RT_PRESENCE=1 apt install cuda-drivers  
  
sudo apt-get update && sudo apt-get install -y --no-install-recommends ca-certificates  
curl gnupg2  
sudo apt-get remove docker docker-engine docker.io containerd runc  
sudo install -m 0755 -d /etc/apt/keyrings  
sudo curl -fsSL <https://download.docker.com/linux/ubuntu/gpg> -o /etc/apt/keyrings/docker.asc  
sudo chmod a+r /etc/apt/keyrings/docker.asc  
# Add the repository to Apt sources:  
sudo tee /etc/apt/sources.list.d/docker.sources <<EOF  
Types: deb  
URIs: <https://download.docker.com/linux/ubuntu>  
Suites: $(. /etc/os-release && echo "${UBUNTU_CODENAME:-$VERSION_CODENAME}")
```

```
Components: stable
Signed-By: /etc/apt/keyrings/docker.asc
EOF
sudo apt update
sudo apt install docker-ce docker-ce-cli containerd.io docker-buildx-plugin docker-compose-plugin
sudo docker run hello-world
sudo usermod -aG docker $USER

curl -fsSL <https://nvidia.github.io/libnvidia-container/gpgkey> | sudo gpg --dearmor -o /usr/share/keyrings/nvidia-container-toolkit-keyring.gpg && curl -s -L <https://nvidia.github.io/libnvidia-container/stable/deb/nvidia-container-toolkit.list> | sed 's#deb <https://#deb> [signed-by=/usr/share/keyrings/nvidia-container-toolkit-keyring.gpg] <https://#g>' | sudo tee /etc/apt/sources.list.d/nvidia-container-toolkit.list
sudo apt update
sudo apt install nvidia-container-toolkit
sudo nvidia-ctl runtime configure --runtime=docker
sudo reboot
sudo docker run --rm --runtime=nvidia --gpus all ubuntu nvidia-smi

git clone <https://github.com/gautz/unistra-aica-practical> aica
cd ~/aica/package-template
docker build -f aica-package.toml -t object-detection-utils .
```

RT Kernel

RT Kernel ou Low Latency ?

<https://unix.stackexchange.com/questions/553980/why-would-anyone-choose-not-to-use-the-lowlatency-kernel>

Soit on build à la main (<https://innovation.iha.unistra.fr/books/robotique-open-source/page/commander-un-robot-ur-avec-le-driver-ros2#bkmrk-installation-d%27ubunt>), soit on prend un Kernel qui est dispo dans les dépôts

```
sudo apt list *realtime* linux*rt
```

```
ubuntu-realtime
linux-realtime
linux-image-6.8.1-1015-realtime
```

- On install `sudo apt install ubuntu-realtime`
- Permettre le choix du noyau au démarrage (grub)
- `sudo nano /etc/default/grub`

```
GRUB_SAVEDEFAULT=true
GRUB_DEFAULT="saved" # Le dernier Kernel choisi devient le Kernel par défaut
#GRUB_DEFAULT="Advanced options for Ubuntu>Ubuntu, with Linux 6.8.1-1015-realtime"
#GRUB_TIMEOUT_STYLE=hidden
GRUB_TIMEOUT=3 # 3 secondes pour choisir le Kernel à démarrer
```

- `sudo update-grub`

<https://unix.stackexchange.com/questions/198003/set-the-default-kernel-in-grub>

https://www.gnu.org/software/grub/manual/grub/html_node/Simple-configuration.html

Accélération GPU

Que ce soit pour LeRobot, pour AICA, ou en général pour utiliser des modèles d'IA, l'installation de Linux avec les bons drivers graphiques n'est pas toujours aisé.

On veut accéder dans Docker aux capacités Compute d'un GPU, essentiellement fournie par NVidia Cuda. On différenciera l'installation d'un serveur qui n'a pas besoin de l'accélération graphique liée à l'affichage, ni de capacités temps-réel, contrairement à un PC de commande de robot.

NVidia Driver et RT Kernel

<https://interfacinglinux.com/2024/01/16/nvidia-cuda-on-debian-real-time-kernel/>

<https://gist.github.com/pantor/9786c41c03a97bca7a52aa0a72fa9387>

Prérequis

- Les paquets Nvidia pour les Kernels installés ne sont pas nécessairement dispos, mais le patch est automatique
- Par contre le patch échoue si un RT Kernel est détecté
- Il faut forcer le patch à s'appliquer sur le RT Kernel
- `export IGNORE_PREEMPT_RT_PRESENCE=1`

- On peut l'ajouter au `~/.bashrc` pour ne pas oublier de le faire lors d'un upgrade de Kernel)
- On installe les headers pour le Kernel en cours
- `sudo apt install linux-headers-$(uname -r)`
- S'il y a d'autres Kernel, installer les header
- `sudo apt install linux-headers- ...`

`sudo apt install nvidia-driver` installe la dernière version du driver dispo, mais cuda-drivers n'est pas forcément dispo pour cette version. Donc on va chercher la bonne version.

Pour supprimer tous les drivers nvidia précédemment installés. **A utiliser avec précautions** : `sudo apt autoremove --purge *nvidia*`

Installation du `nvidia-driver` et de cuda

- On installe le dépôt CUDA

```
wget https://developer.download.nvidia.com/compute/cuda/repos/$distro/x86_64/cuda-keyring_1.1-1_all.deb
sudo dpkg -i cuda-keyring_1.1-1_all.deb
sudo apt update
```

- On regarde les version de `nvidia-driver` qui peuvent être pin :
- `sudo apt install nvidia-driver-pinning-*`
- On regarde les version des `cuda-drivers` qui peuvent être installées :
- `sudo apt list cuda-drivers-*`
- On regarde quelle version de `nvidia-driver` serait installé pour une version voulue de cuda :
- Exemple : `sudo apt install cuda-13-1` OU `sudo apt install cuda-12-8`
- On choisi de pin la version de `nvidia-driver` qui a un `cuda-drivers` et qui permet d'installer la bonne version de CUDA :
- Exemple : `sudo apt install nvidia-driver-pinning-550` installe CUDA 12.5
- Exemple : `sudo apt install nvidia-driver-pinning-560` installe CUDA 12.6
- Exemple : `sudo apt install nvidia-driver-pinning-570` installe CUDA 12.8
- Exemple : `sudo apt install nvidia-driver-pinning-580` installe CUDA 13.0
- On install les drivers propriétaires (Calcul et Affichage GPU) :
- `sudo IGNORE_PREEMPT_RT_PRESENCE=1 apt install cuda-drivers` (pour patcher même les RT Kernel)
- Installer nvidia-container-toolkit pour Docker : `sudo apt install nvidia-container-toolkit`

<https://docs.nvidia.com/datacenter/cloud-native/container-toolkit/latest/install-guide.html#configuring-docker>

Optionnel

- Si on est sur un serveur, on peut aussi n'installer que les composants de Calcul GPU :

```
sudo apt -V install libnvidia-compute nvidia-dkms
```

- Si on est sur un PC, on peut aussi n'installer que les composants d'Affichage GPU :

```
sudo apt -V install libnvidia-gl nvidia-dkms
```

- Pour installer les composants Libres (Open Kernel Modules), voir :

<https://docs.nvidia.com/datacenter/tesla/driver-installation-guide/ubuntu.html>

- Installer le SDK CUDA `sudo apt install cuda-toolkit`
- puis les paquets GDS `sudo apt install nvidia-gds` (qui contient `nvidia-fs` kernel module)
- pour `arm64-jetson` : `sudo apt install cuda-compat`

<https://docs.nvidia.com/cuda/cuda-installation-guide-linux/#network-repo-installation-for-ubuntu>

Vérification de la compatibilité GPU - Application IA

Procédure :

- Lister les applications d'IA qu'on va vouloir faire tourner
- Regarder les **prérequis de la version actuelle de l'application IA**
- Regarder les prérequis de ses dépendances
- Par exemple YOLO requiert onnxruntime-gpu
- Regarder les **prérequis en termes GPU** (Compute Capability, etc.)
- Regarder les **prérequis en termes d'environnement d'exécution**
 - Version d'Ubuntu et drivers dispos
 - Version de CUDA, cuDNN, Pytorch
- Acheter le GPU nécessaire et installer la version d'Ubuntu nécessaire
- Si on est motivé et qu'on veut essayer avec notre GPU et notre version d'Ubuntu actuelle, regarder les prérequis des versions précédentes et voir s'il y en a une qui passe

On a une application d'IA donnée

Par exemple YOLO :

- utilise onnxruntime <https://onnxruntime.ai/docs/execution-providers/CUDA-ExecutionProvider.html>
- onnxruntime-gpu $\geq 1.18.1$: CUDA 12.x ; cuDNN 9.x ; PyTorch $\geq 2.4.0$
- onnxruntime-gpu $< 1.18.0$: CUDA 12.x ; cuDNN 8.x ; PyTorch $< 2.4.0$
- onnxruntime-gpu 1.18-1.20 : CUDA 11.8 ; cuDNN 8.x ; PyTorch $\leq 2.3.1$

ONNX Runtime (ORT) qui sert à l'inférence des modèles Yolo sur GPU nécessitent des Compute Capability ≥ 6.0

- **onnxruntime-gpu ≥ 1.16 supports CC 6.0 or above**
- **onnxruntime-gpu < 1.18 requiert CUDA 11.x**
- **L'environnement YOLO de AICA utilise onnxruntime-gpu=1.22.2**
- **onnxruntime-gpu ≥ 1.24 requiert CC 6.0 pour CUDA 12 et CC 7.5 pour CUDA 13**

Différentes versions de l'environnement d'exécution

- Grâce à la [compatibilité des versions mineures de Nvidia CUDA](#), une application d'IA compilée avec CUDA 11.8 peut être exécutée avec n'importe laquelle des version CUDA 11.x . Idem pour CUDA 12.x .
- Par contre une application cuDNN 8.x n'est pas compatible avec cuDNN 9.x .
- PyTorch 2.3 et inférieur utilisent cuDNN 8.x
- PyTorch 2.4 et supérieur utilisent cuDNN 9.x
- Il faut donc choisir la version de Pytorch en fonction des versions de CUDA et cuDNN qui sont compatibles avec l'environnement d'exécution (carte graphique et driver)

<https://docs.nvidia.com/deeplearning/cudnn/backend/latest/reference/support-matrix.html>

cuDNN \geq v9.12.0 supporte :

- CUDA 12.x (nvidia-driver \geq 525.60.13)
- CUDA 13.x (nvidia-driver \geq 580.65.06)
- CUDA CC \geq 7.5

cuDNN \leq v9.11.1

- CUDA 12.x (nvidia-driver \geq 525.60.13)
- CUDA CC \geq 5.0-9.0 (10.0-12.0 avec CUDA \geq 12.8 et nvidia-driver \geq 570.26)

cuDNN \leq v9.10.2 :

- CUDA 12.x (nvidia-driver \geq 525.60.13) (12.8-9 pour \geq 570.26 et CC 10-12)
- CUDA 11.x (nvidia-driver \geq 450.80.02)
- CUDA CC \geq 5.0-9.0 (10.0-12.0 avec CUDA \geq 12.8 et nvidia-driver \geq 570.26)

Compatibilité de version d'Ubuntu

Sur Ubuntu 24.04 :

- les `sudo apt list nvidia-driver*` dispos sont 460-470,515-590
- les `sudo apt list cuda-drivers*` dispos sont 550,555,560,565,570,575,580
- les `sudo apt list nvidia-driver-pinning*` dispo sont 570,580,590

- les `sudo apt list cuda-toolkit*` seuls CUDA 12.5-13.1 sont dispo

On a une carte graphique donnée :

- Vérification du **Compute Capability (CC)** <https://developer.nvidia.com/cuda/gpus>
- Si on est dans cette liste, donc **CC >= 7.5 c'est TOP, on est compatible avec onnx et CUDA 13**
- A partir de 6.0 on est compatible avec onnx et CUDA 12 (mais pas CUDA 13)
- On conseille de **laisser tomber l'IA avec des CC de 5.0** ou inférieur
- Si on a **5.2 >= CC < 6.0** , on a une carte Legacy, voir ci-dessous, **c'est compliqué**
- On vérifie la version de CUDA Max supportée en fonction du CC :
<https://stackoverflow.com/questions/28932864/which-compute-capability-is-supported-by-which-cuda-versions>
- On va donc pouvoir chercher une compatibilité d'exécution avec CUDA 12.x et CUDA 11.x , mais pas CUDA 13.x

Problèmes avec les GPU NVidia anciens : <https://github.com/ultralytics/ultralytics/issues/5305>

GPU NVidia anciens / Legacy

On lance Yolo et on a l'erreur suivante :

```
10:17:40.111 [yolo_executor] error: ONNX Runtime error during model query: Non-zero status code returned while running QuickGelu node. Name:'node_silu/QuickGeluFusion/' Status Message: CUDA error cudaErrorNoKernelImageForDevice: no kernel image is available for execution on the device
```

ONNX Runtime (ORT) qui sert à l'inférence des modèles Yolo sur GPU nécessitent des **Compute Capability > 5.2**

- onnxruntime-gpu **1.14** supports CC 3.7 or above
- **onnxruntime-gpu 1.15 supports CC 5.2 or above**
- onnxruntime-gpu >=1.16 supports CC 6.0 or above
- **onnxruntime-gpu <1.18 requiert CUDA 11.x**
- **>1.24 requiert CC 6.0 pour CUDA 12 et CC 7.5 pour CUDA 13**
- **L'environnement YOLO de AICA utilise onnxruntime-gpu=1.22.2**
- FP16 models ne tournent qu'à partir de CC 5.3
- C'est pour ça que l'erreur indique qu'il n'y a pas de kernel FP16 compilé pour notre GPU
- Problème : CUDA 11.x n'est pas dispo sur Ubuntu 24.04
- Mais peut être installé : <https://askubuntu.com/questions/1536271/can-i-install-cuda-11-4-in-ubuntu-24-04-if-so-how>

Solution (voir analyse ci-dessous) :

- Installer le driver 470
- Installer CUDA 11.8? en suivant <https://askubuntu.com/questions/1536271/can-i-install-cuda-11-4-in-ubuntu-24-04-if-so-how>
- Exporter le modèle onnx en kernel FP32
- Déployer le modèle YOLO dans un environnement Legacy avec onnxruntime-gpu 1.15

<https://github.com/microsoft/onnxruntime/issues/17861#issuecomment-1758098712>

On a une carte graphique donnée | par exemple Quadro M620 (GM107GLM) :

- Vérification du Compute Capability <https://developer.nvidia.com/cuda/gpus/legacy> | CC5.2
- On conseille de **laisser tomber l'IA avec des Compute Capability de 5.0** ou inférieur |
- Si on a une Compute Capability entre 5.2 et 7.2 , on peut envisager des choses mais c'est compliqué
- On vérifie la version de CUDA Max supportée :
<https://stackoverflow.com/questions/28932864/which-compute-capability-is-supported-by-which-cuda-versions> | pour CC5.2 : CUDA 12.x
- On va donc pouvoir chercher une compatibilité d'exécution avec CUDA 12.x et CUDA 11.x , mais pas CUDA 13.x
- Les `nvidia-driver` dispos sont 460-470,515-590 (535 est testé/recommandé)
- mais les `cuda-drivers` dispos sont 550,555,560,565,570,575,580
- et les `nvidia-driver-pinning` et dispo de 570,580,590
- Exemple : `sudo apt install nvidia-driver-470` mais CUDA 11.x pas dispo sur Ubuntu 24.04
- Exemple : `sudo apt install nvidia-driver-pinning-550` installe CUDA 12.5
- Exemple : `sudo apt install nvidia-driver-pinning-560` installe CUDA 12.6
- Exemple : `sudo apt install nvidia-driver-pinning-570` installe CUDA 12.8
- Exemple : `sudo apt install nvidia-driver-pinning-580` installe CUDA 13.0
- Avec CUDA 12.0-1 et le driver 535 on peut avoir $v8.9.2 \leq cuDNN \leq v9.11.1$
- Avec CUDA 12.2 $v8.9.7 \leq cuDNN \leq v9.11.1$
- Avec CUDA ≥ 12.3 $v9 \leq cuDNN \leq v9.11.1$
- Donc il faudrait CUDA 12.0-2
- mais `sudo apt list cuda-toolkit*` seuls CUDA 12.5-13.1 sont dispos

Option 1 : Driver Version: 580 CUDA Version: 13.0

- On n'a pas cuDNN v8
- on a `cuda-drivers-580`

Option 2 : Driver Version: 570 CUDA Version: 12.8

-
- on a `cuda-drivers-570`

Option 3 : Driver Version: 535.288.01 CUDA Version: 12.2

- On a v8.9.7<=cuDNN<=v9.11.1
- Mais on n'a pas `cuda-drivers`

Option 4 : Driver Version: 470 CUDA Version: 11.x

- Installer CUDA 11.8? en suivant <https://askubuntu.com/questions/1536271/can-i-install-cuda-11-4-in-ubuntu-24-04-if-so-how>
- On n'a pas `cuda-drivers` -> Problème ?

<https://pytorch.org/get-started/previous-versions/>

- Avec pytorch 2.1.1 et 2.2.0 , c'est cuDNN 8.9.2 qui est installé par défaut
- pytorch <2.2.0 n'est plus supporté dans pip

<https://docs.nvidia.com/deeplearning/cudnn/archives/cudnn-892/support-matrix/index.html>

cuDNN=v8.9.2 :

- CUDA 12.0-1 (nvidia-driver>=525.60.13)
- CUDA 11.x (nvidia-driver>=450.80.02)
- CUDA CC>=5.0 <=8.6 (8.9-9.0 avec CUDA>=11.8)
- Avec pytorch ... c'est cuDNN 8.9.7 qui est installé par défaut

<https://docs.nvidia.com/deeplearning/cudnn/archives/cudnn-897/support-matrix/index.html>

cuDNN=v8.9.7 :

- CUDA 12.0-2 (nvidia-driver>=525.60.13)
- CUDA 11.x (nvidia-driver>=450.80.02)
- CUDA CC>=5.0 <=8.6 (8.9-9.0 avec CUDA>=11.8)

Voir aussi <https://docs.nvidia.com/deeplearning/cudnn/onnxruntime-gpuarchives/index.html>

Avec :

```
#syntax=ghcr.io/aica-technology/app-builder:v2
# launch with bash:
[ core]
"image" = "v5.1.0"

[ packages]
# add components
```

```

#aica/components/rl-policy-components" = "v3.0.0"
#aica/components/advanced-perception" = "v1.0.0" # contains YoloExecutor
#aica/components/core-vision" = "v1.1.2" # contains CameraStreamer
#aica/foss/toolkits/cuda" = "v1.0.0-cuda24.12" # prerequisite for NVidia GPU acceleration
#aica/foss/toolkits/ml" = "v1.0.0-gpu24.12" # prerequisite for ML model inference

# other extensions
"object-detection-utils" # self-built component to feed goal frame extracted from yolo to
robot velocity controller

# add hardware collections
#aica/collections/intel-realsense-collection" = "v2.0.1" # D4XX and L515 cameras models,
stream RGBD
#aica/collections/ur-collection" = "v4.3.0"

```

On a :

```

ros2@iha-portrob-1: ~/examples$ python3 -m torch.utils.collect_env
<frozen runpy>:128: RuntimeWarning: 'torch.utils.collect_env' found in sys.modules after
import of package 'torch.utils', but prior to execution of 'torch.utils.collect_env'; this may
result in unpredictable behaviour
Collecting environment information...
PyTorch version: 2.6.0+cu126
Is debug build: False
CUDA used to build PyTorch: 12.6
ROCM used to build PyTorch: N/A

OS: Ubuntu 24.04.2 LTS (x86_64)
GCC version: (Ubuntu 13.3.0-6ubuntu2~24.04) 13.3.0
Clang version: Could not collect
CMake version: version 3.28.3
Libc version: glibc-2.39

Python version: 3.12.3 (main, Feb 4 2025, 14:48:35) [GCC 13.3.0] (64-bit runtime)
Python platform: Linux-6.17.0-14-generic-x86_64-with-glibc2.39
Is CUDA available: True
CUDA runtime version: 12.6.85
CUDA_MODULE_LOADING set to: LAZY
GPU models and configuration: GPU 0: Quadro M620
Nvidia driver version: 570.211.01

```

cuDNN version: Probably one of the following:

/usr/lib/libcudnn.so.9.6.0
/usr/lib/libcudnn_adv.so.9.6.0
/usr/lib/libcudnn_cnn.so.9.6.0
/usr/lib/libcudnn_engines_precompiled.so.9.6.0
/usr/lib/libcudnn_engines_runtime_compiled.so.9.6.0
/usr/lib/libcudnn_graph.so.9.6.0
/usr/lib/libcudnn_heuristic.so.9.6.0
/usr/lib/libcudnn_ops.so.9.6.0

HIP runtime version: N/A

MIOpen runtime version: N/A

Is XNNPACK available: True

CPU:

Architecture: x86_64
CPU op-mode(s): 32-bit, 64-bit
Address sizes: 39 bits physical, 48 bits virtual
Byte Order: Little Endian
CPU(s): 4
On-line CPU(s) list: 0-3
Vendor ID: GenuineIntel
Model name: Intel(R) Core(TM) i5-7440HQ CPU @ 2.80GHz
CPU family: 6
Model: 158
Thread(s) per core: 1
Core(s) per socket: 4
Socket(s): 1
Stepping: 9
CPU(s) scaling MHz: 84%
CPU max MHz: 3800.0000
CPU min MHz: 800.0000
BogoMIPS: 5599.85
Flags: fpu vme de pse tsc msr pae mce cx8 apic sep mtrr pge
mca cmov pat pse36 clflush dts acpi mmx fxsr sse sse2 ss ht tm pbe syscall nx pdpe1gb rdtscp
lm constant_tsc art arch_perfmon pebs bts rep_good nopl xtopology nonstop_tsc cpuid aperfmperf
pni pclmulqdq dtes64 monitor ds_cpl vmx smx est tm2 ssse3 sdbg fma cx16 xtpr pdcm pcid sse4_1
sse4_2 x2apic movbe popcnt tsc_deadline_timer aes xsave avx f16c rdrand lahf_lm abm
3dnowprefetch cpuid_fault epb pti ssbd ibrs ibpb stibp tpr_shadow flexpriority ept vpid ept_ad
fsgsbase tsc_adjust bmi1 avx2 smep bmi2 erms invpcid mpx rdseed adx smap clflushopt intel_pt
xsaveopt xsavec xgetbv1 xsaves dtherm ida arat pln pts hwp hwp_notify hwp_act_window hwp_epp

vnmi md_clear flush_lld arch_capabilities

Virtualization:	VT-x
L1d cache:	128 KiB (4 instances)
L1i cache:	128 KiB (4 instances)
L2 cache:	1 MiB (4 instances)
L3 cache:	6 MiB (1 instance)
NUMA node(s):	1
NUMA node0 CPU(s):	0-3
Vulnerability Gather data sampling:	Vulnerable
Vulnerability Ghostwrite:	Not affected
Vulnerability Indirect target selection:	Not affected
Vulnerability Itlb multihit:	KVM: Mitigation: Split huge pages
Vulnerability L1tf:	Mitigation; PTE Inversion; VMX conditional cache flushes, SMT disabled
Vulnerability Mds:	Mitigation; Clear CPU buffers; SMT disabled
Vulnerability Meltdown:	Mitigation; PTI
Vulnerability Mmio stale data:	Mitigation; Clear CPU buffers; SMT disabled
Vulnerability Old microcode:	Not affected
Vulnerability Reg file data sampling:	Not affected
Vulnerability Retbleed:	Mitigation; IBRS
Vulnerability Spec rstack overflow:	Not affected
Vulnerability Spec store bypass:	Mitigation; Speculative Store Bypass disabled via prctl
Vulnerability Spectre v1:	Mitigation; usercopy/swaps barriers and __user pointer sanitization
Vulnerability Spectre v2:	Mitigation; IBRS; IBPB conditional; STIBP disabled;
RSB filling; PBR SB-eIBRS	Not affected; BHI Not affected
Vulnerability Srbds:	Mitigation; Microcode
Vulnerability Tsa:	Not affected
Vulnerability Tsx async abort:	Mitigation; TSX disabled
Vulnerability Vmscape:	Mitigation; IBPB before exit to userspace

Versions of relevant libraries:

```
[pip3] ament-flake8==0.17.2
[pip3] flake8==7.0.0
[pip3] flake8-builtins==2.1.0
[pip3] flake8-comprehensions==3.14.0
[pip3] flake8-docstrings==1.6.0
[pip3] flake8-import-order==0.18.2
[pip3] flake8-quotes==3.4.0
```

```
[pip3] numpy==1.26.4
[pip3] nvidia-cublas-cu12==12.6.4.1
[pip3] nvidia-cuda-cupti-cu12==12.6.80
[pip3] nvidia-cuda-nvrtc-cu12==12.6.77
[pip3] nvidia-cuda-runtime-cu12==12.6.77
[pip3] nvidia-cudnn-cu12==9.5.1.17
[pip3] nvidia-cufft-cu12==11.3.0.4
[pip3] nvidia-curand-cu12==10.3.7.77
[pip3] nvidia-cusolver-cu12==11.7.1.2
[pip3] nvidia-cusparselt-cu12==0.6.3
[pip3] nvidia-nccl-cu12==2.21.5
[pip3] nvidia-nvjitlink-cu12==12.6.85
[pip3] nvidia-nvtx-cu12==12.6.77
[pip3] onnxruntime-gpu==1.22.2
[pip3] pytorch3d==0.7.8
[pip3] torch==2.6.0+cu126
[pip3] torchaudio==2.6.0+cu126
[pip3] torchvision==0.21.0+cu126
[pip3] triton==3.2.0
[conda] Could not collect
```

Avec :

```
"@aica/foss/toolkits/cuda" = "v1.0.0-cuda24.12" # prerequisite for NVidia GPU acceleration
"@aica/foss/toolkits/ml" = "v1.0.0-gpu24.12" # prerequisite for ML model inference
```

On a :

```
ros2@iha-portrob-1: ~/examples$ python3 -m torch.utils.collect_env
<frozen runpy>:128: RuntimeWarning: 'torch.utils.collect_env' found in sys.modules after
import of package 'torch.utils', but prior to execution of 'torch.utils.collect_env'; this may
result in unpredictable behaviour
Collecting environment information...
PyTorch version: 2.6.0+cu126
Is debug build: False
CUDA used to build PyTorch: 12.6
ROCM used to build PyTorch: N/A

OS: Ubuntu 24.04.2 LTS (x86_64)
GCC version: (Ubuntu 13.3.0-6ubuntu2~24.04) 13.3.0
```

Clang version: Could not collect

CMake version: version 3.28.3

Libc version: glibc-2.39

Python version: 3.12.3 (main, Feb 4 2025, 14:48:35) [GCC 13.3.0] (64-bit runtime)

Python platform: Linux-6.17.0-14-generic-x86_64-with-glibc2.39

Is CUDA available: True

CUDA runtime version: 12.6.85

CUDA_MODULE_LOADING set to: LAZY

GPU models and configuration: GPU 0: Quadro M620

Nvidia driver version: 570.211.01

cuDNN version: Probably one of the following:

/usr/lib/libcudnn.so.9.6.0

/usr/lib/libcudnn_adv.so.9.6.0

/usr/lib/libcudnn_cnn.so.9.6.0

/usr/lib/libcudnn_engines_precompiled.so.9.6.0

/usr/lib/libcudnn_engines_runtime_compiled.so.9.6.0

/usr/lib/libcudnn_graph.so.9.6.0

/usr/lib/libcudnn_heuristic.so.9.6.0

/usr/lib/libcudnn_ops.so.9.6.0

HIP runtime version: N/A

MIOpen runtime version: N/A

Is XNNPACK available: True

CPU:

Architecture: x86_64

CPU op-mode(s): 32-bit, 64-bit

Address sizes: 39 bits physical, 48 bits virtual

Byte Order: Little Endian

CPU(s): 4

On-line CPU(s) list: 0-3

Vendor ID: GenuineIntel

Model name: Intel(R) Core(TM) i5-7440HQ CPU @ 2.80GHz

CPU family: 6

Model: 158

Thread(s) per core: 1

Core(s) per socket: 4

Socket(s): 1

Stepping: 9

CPU(s) scaling MHz: 81%

```

CPU max MHz:          3800.0000
CPU min MHz:          800.0000
BogoMIPS:             5599.85
Flags:                fpu vme de pse tsc msr pae mce cx8 apic sep mtrr pge
mca cmov pat pse36 clflush dts acpi mmx fxsr sse sse2 ss ht tm pbe syscall nx pdpe1gb rdtscp
lm constant_tsc art arch_perfmon pebs bts rep_good nopl xtopology nonstop_tsc cpuid aperfmperf
pni pclmulqdq dtes64 monitor ds_cpl vmx smx est tm2 ssse3 sdbg fma cx16 xtpr pdcm pcid sse4_1
sse4_2 x2apic movbe popcnt tsc_deadline_timer aes xsave avx f16c rdrand lahf_lm abm
3dnowprefetch cpuid_fault epb pti ssbd ibrs ibpb stibp tpr_shadow flexpriority ept vpid ept_ad
fsgsbase tsc_adjust bmi1 avx2 smep bmi2 erms invpcid mpx rdseed adx smap clflushopt intel_pt
xsaveopt xsavec xgetbv1 xsaves dtherm ida arat pln pts hwp hwp_notify hwp_act_window hwp_epp
vnmi md_clear flush_l1d arch_capabilities

Virtualization:      VT-x
L1d cache:           128 KiB (4 instances)
L1i cache:           128 KiB (4 instances)
L2 cache:            1 MiB (4 instances)
L3 cache:            6 MiB (1 instance)
NUMA node(s):        1
NUMA node0 CPU(s):   0-3
Vulnerability Gather data sampling:  Vulnerable
Vulnerability Ghostwrite:              Not affected
Vulnerability Indirect target selection: Not affected
Vulnerability Itlb multihit:           KVM: Mitigation: Split huge pages
Vulnerability L1tf:                    Mitigation; PTE Inversion; VMX conditional cache
flushes, SMT disabled
Vulnerability Mds:                      Mitigation; Clear CPU buffers; SMT disabled
Vulnerability Meltdown:                 Mitigation; PTI
Vulnerability Mmio stale data:          Mitigation; Clear CPU buffers; SMT disabled
Vulnerability Old microcode:            Not affected
Vulnerability Reg file data sampling:    Not affected
Vulnerability Retbleed:                 Mitigation; IBRS
Vulnerability Spec rstack overflow:     Not affected
Vulnerability Spec store bypass:        Mitigation; Speculative Store Bypass disabled via
prctl
Vulnerability Spectre v1:               Mitigation; usercopy/swapgs barriers and __user
pointer sanitization
Vulnerability Spectre v2:               Mitigation; IBRS; IBPB conditional; STIBP disabled;
RSB filling; PBR SB-eIBRS Not affected; BHI Not affected
Vulnerability Srbds:                    Mitigation; Microcode
Vulnerability Tsa:                      Not affected

```

Vulnerability Tsx async abort:	Mitigation; TSX disabled
Vulnerability Vmscape:	Mitigation; IBPB before exit to userspace

Versions of relevant libraries:

```
[pip3] ament-flake8==0.17.2
[pip3] flake8==7.0.0
[pip3] flake8-builtins==2.1.0
[pip3] flake8-comprehensions==3.14.0
[pip3] flake8-docstrings==1.6.0
[pip3] flake8-import-order==0.18.2
[pip3] flake8-quotes==3.4.0
[pip3] numpy==1.26.4
[pip3] nvidia-cublas-cu12==12.6.4.1
[pip3] nvidia-cuda-cupti-cu12==12.6.80
[pip3] nvidia-cuda-nvrtc-cu12==12.6.77
[pip3] nvidia-cuda-runtime-cu12==12.6.77
[pip3] nvidia-cudnn-cu12==9.5.1.17
[pip3] nvidia-cufft-cu12==11.3.0.4
[pip3] nvidia-curand-cu12==10.3.7.77
[pip3] nvidia-cusolver-cu12==11.7.1.2
[pip3] nvidia-cuspars-cu12==12.5.4.2
[pip3] nvidia-cusparselt-cu12==0.6.3
[pip3] nvidia-nccl-cu12==2.21.5
[pip3] nvidia-nvjitlink-cu12==12.6.85
[pip3] nvidia-nvtx-cu12==12.6.77
[pip3] onnxruntime-gpu==1.22.2
[pip3] pytorch3d==0.7.8
[pip3] torch==2.6.0+cu126
[pip3] torchaudio==2.6.0+cu126
[pip3] torchvision==0.21.0+cu126
[pip3] triton==3.2.0
[conda] Could not collect
```

Sources

<https://stackoverflow.com/questions/30820513/what-is-the-correct-version-of-cuda-for-my-nvidia-driver/30820690#30820690>

<https://interfacinglinux.com/2024/01/16/nvidia-cuda-on-debian-real-time-kernel/>

<https://forum.zorin.com/t/nvidia-drivers-cannot-be-installed-because-of-real-time-kernel/46419/22>

Machine Learning LeRobot avec SO-ARM101

Installation et prérequis

- Une carte graphique NVidia et une installation de Cuda ?
- Comparaison cartes graphiques (un peu dépassé car ne prend pas en compte les dernières génération type 5090) <https://www.geeksforgeeks.org/machine-learning/choosing-the-right-gpu-for-your-machine-learning/>
- Puissance de calcul dispo à l'Innov'Lab TPS <https://www.innovlab-tps.net/calcul-et-stockage.html>
 - Pour l'**entraînement** des modèles : Serveur de calcul Apollo 6500 doté de **4 GPU HGX A100, 80Go**
 - Pour l'**inférence** des modèles : Terminaux de calcul dotés GPU Nvidia **RTX 4090, 24Go**

Prérequis pour l'exécution d'un modèle d'IA :

- Config minimum : L'exécution semble résulter en un mouvement saccadé du robot sur une Quadro P620 (2 GB GDDR5).
- Config recommandée : 4-8 GB GDDR, testé avec RTX 2080 Super de 2019 (8 GB GDDR6)
- Il faut au moins 16 GB de RAM (CPU) sinon elle sature pendant l'enregistrement du dataset d'évaluation.

Prérequis pour l'entraînement d'un modèle d'IA :

- L'entrainement avec 100 épisodes et 100 000 steps a mis 12H sur une RTX 2080 Super de 2019
 - mais `batch_size=8` alors qu'il faut un minimum de 16, et dans l'idéal 64. Cela résulte sans doute en des mouvements saccadés et une mauvaise généralisation du modèle (variation de la position de la pile).
 - Il n'aboutit pas au bout de plus de 24H sur une Quadro P620 (via WSL2 et Docker)
- Config minimum pour ACT : `batch_size=16`
 - Tesla T4 (gratuit 5H / mois sur Google Colab) on a 15G de RAM qui permet donc un `batch_size=15`
 - <https://github.com/huggingface/lerobot/issues/2213>
- Config recommandée pour ACT : `batch_size=64`

- avec A100 (12€ les 100 compute units, 70 = ~5H sur Google Colab) on a 40G de RAM ou 80G de RAM (extra RAM)
- <https://github.com/huggingface/lerobot/blob/main/docs/source/notebooks.mdx#training-act>
- https://colab.research.google.com/github/antonilo/real_world_robot_learning_sp25/blob/main/_tutorials/lerobot_tutorial/lerobot_tutorial.ipynb#scrollTo=ff7eafe4
- avec un `batch_size=64` la RAM consommée était d'environ 50G, l'entraînement a mis 7H environ pour environ 80 compute units, soit environ 10€
- https://huggingface.co/gautz/act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch_60ksteps
- <https://wandb.ai/hentz-robotics/lerobot/runs/niiti0v3?nw=nwusergautz>

Installation sous Linux

- **Installer Miniconda pour Linux** : l'environnement de développement Python

```
wget https://repo.anaconda.com/miniconda/Miniconda3-latest-Linux-x86_64.sh
# Vérifier que la clé SHA256 de Miniconda3-latest-Linux-x86_64.sh ici :
https://repo.anaconda.com/miniconda/ correspond à :
sha256sum ~/Miniconda3-latest-Linux-x86_64.sh
bash ~/Miniconda3-latest-Linux-x86_64.sh
source ~/.bashrc
```

- Créer et activer l'environnement Conda

```
conda create -y -n lerobot python=3.10
conda activate lerobot
git clone https://github.com/huggingface/lerobot.git ~/lerobot
conda install ffmpeg=7.1.1 -c conda-forge
cd ~/lerobot && pip install -e ".[feetech]"
```

- A chaque ouverture de Terminal l'environnement python conda est activé, voir au bas du `~/.bashrc`
- Pour éviter les conflits, on propose d'avoir un fichier `~/.bashrc_conda` pour conda et un `~/.bashrc_ros` pour ros

Astuces pour activer/désactiver l'environnement conda sans passer par la modification du `~/.bashrc` :

- Ne pas activer conda au démarrage : `conda config --set auto_activate_base false`
- Ne pas configurer le shell pour initialiser conda au démarrage : `conda init --reverse $SHELL`

Installation Windows

- Le compte utilisateur doit avoir les droits pour créer des raccourcis (liens symboliques) dans les sous-dossiers de `C: \Users\%USER%\lerobot\outputs\train\`
- Ils seront utilisés lors de l'entraînement pour créer un lien entre le dossier `last` et le dossier du dernier Checkpoint par ex. `100000`
 - Le plus sûr est de **travailler avec un compte administrateur**
 - Il faut peut-être aussi les droits dans le dossier `C: \Users\%USER%\cache\huggingface\lerobot\%HUGGINGFACE_USER`
- [Installer Miniconda pour Windows](#) : l'environnement de développement Python
- Ouvrir `Anaconda PowerShell Prompt`
- Créer et activer l'environnement Conda

```
conda create -y -n lerobot python=3.10
conda activate lerobot
git clone https://github.com/huggingface/lerobot.git ~/lerobot
```

- Installer Pytorch pour la version de Cuda installée sur votre système (testé avec une version Cuda 127 installée et la version cu128 de Pytorch) et autres dépendances nécessaires

```
cd ~/lerobot
# pip install av poetry-core
conda install ffmpeg=7.1.1 -c conda-forge
pip3 install --pre torch torchvision torchaudio --index-url
https://download.pytorch.org/whl/cu128
pip install -e ".[feetech]"
```

Débugger l'installation si les scripts basculent sur le `cpu`

S'assurer que Pytorch a été installé, cela installe Cuda :

```
pip3 install --pre torch torchvision torchaudio --index-url https://download.pytorch.org/whl/cu128
```

Récupérer les infos système :

- `python lerobot/scripts/display_sys_info.py`
- `python -m torch.utils.collect_env`
- `python -c "import torch; print(torch.cuda.is_available())" && nvcc -V`
- cf. <https://github.com/huggingface/lerobot/issues/928> > Here for additional information of my full installation.

Créer un compte HuggingFace et se login via un token

- Se créer un compte sur <https://huggingface.co/settings/tokens>
- Aller dans le menu > Access Tokens
- Récupérer un `TOKEN` avec des droits en écriture
- Ouvrir un Anaconda PowerShell Ierobot
`(\lerobot) PS C:\Users\gauthier.hentz\github\lerobot>`
- Login avec le Token
`huggingface-cli.exe login --token TOKEN`

Vous pouvez maintenant uploader et télécharger des DataSets et Modèles vers le Hub HuggingFace pour collaborer avec des experts du Machine Learning.

Google Colab

Pour avoir accès à un GPU avec suffisamment de mémoire (16G recommandé et 64G dans l'idéal) on peut utiliser Google Colab

- Avec Tesla T4 (gratuit 5H / mois) on a 15G de RAM qui permet donc un `batch_size=15`
- Avec A100 (12€ les 70 crédits) on a 80G de RAM qui permet donc un `batch_size=64`

- Ouvrir le Notebook :

<https://colab.research.google.com/github/huggingface/notebooks/blob/main/lerobot/trainin-g-act.ipynb#scrollTo=NQUk3Y0WwYZ4>

- Voir aussi

https://colab.research.google.com/github/antonilo/real_world_robot_learning_sp25/blob/main/_tutorials/lerobot_tutorial/lerobot_tutorial.ipynb#scrollTo=ff7eafe4

- Change runtime type

Change runtime type

Runtime type

Python 3

Hardware accelerator

- CPU A100 GPU L4 GPU T4 GPU
- v6e-1 TPU v5e-1 TPU

High-RAM

Runtime version

Latest (recommended)

- Install conda
- Install LeRobot
- Login avec un jeton d'API Weights & Biases
- Login avec un jeton d'API Hugging Face Hub
- Modifier la commande d'entrainement et l'exécuter :

```
!cd lerobot && python src/lerobot/scripts/lerobot_train.py \  
  --dataset.repo_id=gautz/so101_pick_red_18650_drop_black_box_test2_100ep \  
  --policy.type=act \  
  --output_dir=outputs/train/act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch \  
  --job_name=act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch \  
  --policy.device=cuda \  
  --policy.push_to_hub=True \  
  --policy.repo_id=gautz/act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch \  
  --batch_size=64 \  
  --wandb.enable=true
```

- Surveiller l'exécution depuis le runtime ou WanDB
- Ouvrir un Terminal et lancer la commande pour uploader le dernier Checkpoint du modèle :

```
huggingface-cli upload ${HF_USER}/act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch \  
/content/lerobot/outputs/train/act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch/checkpoi
```

Astuces et Erreurs :

- Si vous utilisez Colab avec un compte gratuit, il faut utiliser l'extension Colab Auto Reconnect pour ne pas être déconnecté au bout de 1H. Il est probable que le runtime soit déconnecté par manque de crédit gratuit avant d'arriver à un checkpoint. Faire des CheckPoint plus souvent, ou passer à un compte payant.
- Si vous utilisez un compte payant, vous ne serez pas déconnecté mais il faut surveiller pour déconnecter le Runtime à la fin de l'entraînement (ou d'un Checkpoint)
- <https://github.com/huggingface/lerobot/issues/1532>

```
18 cd /content/
20 cd lerobot/
24 python
25         from huggingface_hub import HfApi
26         hub_api = HfApi()
27         hub_api.create_tag("gautz/so101_pick_red_18650_drop_black_box_test2_100ep",
tag="v2.1", repo_type="dataset"
30 cd src/
32 cd lerobot
34 python -m lerobot.datasets.v30.convert_dataset_v21_to_v30 --repo-
id=gautz/so101_pick_red_18650_drop_black_box_test2_100ep
```

- <https://stackoverflow.com/questions/78448832/colab-how-to-increase-the-num-workers-in-dataloader>

Voir le rapport : <https://api.wandb.ai/links/hentz-robotics/wdsr4k2r>

Utilisation de LeRobot avec le bash Linux

- Activer l'environnement conda lerobot

```
cd ~/lerobot
```

```
conda activate lerobot
```

```
lerobot-find-port
```

A chaque connexion du robot : `sudo chmod 666 /dev/ttyACM1`

```
lerobot-find-cameras opencv
```

```
lerobot-calibrate --robot.type=so101_follower --robot.port=/dev/ttyACM0 --
robot.id=follower_arm_fan1
```

```
lerobot-calibrate --teleop.type=so101_leader --teleop.port=/dev/ttyACM1 --  
teleop.id=leader_arm_fan1
```

```
lerobot-teleoperate --robot.type=so101_follower --robot.port=/dev/ttyACM0 --  
robot.id=follower_arm_fan1 --teleop.type=so101_leader --teleop.port=/dev/ttyACM1 --  
teleop.id=leader_arm_fan1
```

```
lerobot-dataset-viz --repo-id gautz/so101_pick_red_18650_drop_black_box_test2_100ep --  
episode-index 0
```

```
lerobot-record --robot.type=so101_follower --robot.port=/dev/ttyACM0 --  
robot.id=follower_arm_fan1 --robot.cameras="{ top: {type: opencv, index_or_path: 4, width: 800,  
height: 600, fps: 20}, follower: {type: opencv, index_or_path: 2, width: 800, height: 600, fps:  
20}}" --display_data=true --dataset.push_to_hub=False --  
dataset.repo_id=gautz/eval_act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch_60ksteps  
--dataset.num_episodes=10 --dataset.single_task="Pick red 18650 battery place black box" --  
policy.path=gautz/act_so101_pick_red_18650_drop_black_box_test2_100ep_64batch_60ksteps
```

```
--resume=true
```

```
lerobot-train --dataset.repo_id=gautz/so101_pick_red_18650_drop_black_box_test2_100ep --  
policy.type=act --  
output_dir=outputs/train/act_so101_pick_red_18650_drop_black_box_test2_100ep_m620 --  
job_name=act_so101_pick_red_18650_drop_black_box_test2_100ep_m620 --policy.device=cuda --  
wandb.enable=false --  
policy.repo_id=gautz/act_so101_pick_red_18650_drop_black_box_test2_100ep_m620 --batch_size=2
```

nano lerobot/common/robot_devices/robots/configs.py

```
python lerobot/scripts/control_robot.py --robot.type=so101 --robot.cameras='{}' --  
control.type=teleoperate
```

```
lerobot-record --robot.type=so101_follower --robot.port=/dev/ttyACM0 --  
robot.id=follower_arm_fan1 --robot.cameras="{ top: {type: opencv, index_or_path: 0, width: 800,  
height: 600, fps: 20}, follower: {type: opencv, index_or_path: 2, width: 800, height: 600, fps:  
20}}" --dataset.push_to_hub=False --  
dataset.repo_id=gautz/eval_act_so101_pick_battery_place_ifixit_test1_50ep_rtx507016_chkpt100kter  
--dataset.num_episodes=10 --dataset.single_task="Eval Pick battery place ifixit" --  
policy.path=outputs/train/act_so101_pick_battery_place_ifixit_test1_50ep_rtx507016/checkpoints/1000  
00/pretrained_model --display_data=false
```

Server inference

```
pip install 'lerobot[feetech,async]'
```

```
python -m lerobot.async_inference.robot_client --server_address=127.0.0.1:8080 --  
robot.type=so101_follower --robot.port=/dev/ttyACM0 --robot.id=follower_arm_fan1 --  
robot.cameras="{ top: {type: opencv, index_or_path: 0, width: 800, height: 600, fps: 20}, follower:  
{type: opencv, index_or_path: 2, width: 800, height: 600, fps: 20}}" --task="Eval Pick battery  
place ifixit" --policy_type=act --  
pretrained_name_or_path=gautz/act_so101_pick_battery_place_ifixit_test1_50ep_rtx507016_chkpt100000  
--policy_device=cuda --actions_per_chunk=50 --chunk_size_threshold=0.5 --  
aggregate_fn_name=weighted_average --debug_visualize_queue_size=True
```

Calibration robot et configuration caméras

```
python -m lerobot.calibrate --teleop.type=so101_leader --teleop.port=/dev/ttyACM0 --  
teleop.id=leader_arm_fan1
```

```
python -m lerobot.calibrate --robot.type=so101_follower --robot.port=/dev/ttyUSB0 --  
robot.id=follower_arm_fan1
```

Téléopération

```
python -m lerobot.teleoperate \  
  --robot.type=so101_follower \  
  --robot.port=/dev/ttyUSB0 \  
  --robot.id=follower_arm_fan1 \  
  --robot.cameras="{ top: {type: opencv, index_or_path: 2, width: 640, height: 480, fps:  
30}, follower: {type: opencv, index_or_path: 4, width: 640, height: 480, fps: 30}}" \  
  --teleop.type=so101_leader \  
  --teleop.port=/dev/ttyACM0 \  
  --teleop.id=leader_arm_fan1 \  
  --display_data=true
```

Rejouer dataset en local :

```
python -m lerobot.replay \  
  --robot.type=so101_follower \  
  --robot.port=/dev/ttyUSB0 \  
  --robot.id=follower_arm_fan1 \  
  --dataset.repo_id=gautz/18650-test1-10ep \  
  --dataset.episode=0 # choose the episode you want to replay
```

Machine Learning

Enregistrer dataset en local :

```
python -m lerobot.record \  
  --robot.type=so101_follower \  
  --robot.port=/dev/ttyUSB0 \  
  --robot.id=follower_arm_fan1 \  
  --robot.cameras="{ top: {type: opencv, index_or_path: 2, width: 640, height: 480, fps:  
30}, follower: {type: opencv, index_or_path: 4, width: 640, height: 480, fps: 30}}" \  
  --display_data=true
```

```
--teleop.type=so101_leader \  
--teleop.port=/dev/ttyACM0 \  
--teleop.id=leader_arm_fan1 \  
--display_data=true \  
--dataset.repo_id=gautz/18650-test1-10ep \  
--dataset.episode_time_s=10 \  
--dataset.reset_time_s=10 \  
--dataset.num_episodes=10 \  
--dataset.single_task="Pick red 18650 battery place black box" \  
--dataset.push_to_hub=False
```

Entraîner en local avec le CPU

```
python lerobot/scripts/train.py \  
--dataset.repo_id=gautz/18650-test1-10ep \  
--policy.type=act \  
--output_dir=outputs/train/act_so101_18650-test1-10ep \  
--job_name=act_so101_18650-test1-10ep \  
--policy.device=cpu # \  
--wandb.enable=false # true
```

Entraîner en local avec le GPU NVidia

```
python lerobot/scripts/train.py \  
--dataset.repo_id=gautz/18650-test1-10ep \  
--policy.type=act \  
--output_dir=outputs/train/act_so101_18650-test1-10ep \  
--job_name=act_so101_18650-test1-10ep \  
--policy.device=cuda \  
--wandb.enable=false
```

Enregistrer un dataset d'évaluation d'un modèle à un checkpoint donné :

```
python -m lerobot.record \  
--robot.type=so101_follower \  
--robot.port=/dev/ttyUSB0 \  
--robot.cameras="{ top: {type: opencv, index_or_path: 2, width: 800, height: 600, fps: 30}, follower: {type: opencv, index_or_path: 4, width: 800, height: 600, fps: 30}}" \  
--robot.id=follower_arm_fan1 \  
--display_data=false \  
--wandb.enable=false
```

```
--dataset.repo_id=gautz/eval_act_18650-test2-100ep \  
--dataset.single_task="Pick red 18650 battery place black box" \  
--policy.path=outputs/train/act_so101_18650-test2-100ep/checkpoints/last/pretrained_model \  
--dataset.push_to_hub=False
```

Utilisation de LeRobot avec Anaconda Powershell Prompt

Calibration des robots

```
python -m lerobot.setup_motors --robot.type=so101_follower --robot.port=COM13  
python -m lerobot.setup_motors --robot.type=so101_leader --robot.port=COM14
```

Machine Learning

Collecte de données :

Uploader les données vers le Hub HuggingFace :

https://huggingface.co/docs/lerobot/en/il_robots#dataset-upload

```
huggingface-cli.exe upload gautz/so101_pick_red_18650_drop_black_box_test2_100ep  
..\cache\huggingface\lerobot\gautz\18650-test2-100ep\ --repo-type dataset
```

Entrainer un modèle sur un Dataset (sur [IHA-QLIOVR-1](#), compte admin) :

```
cd ..\gauthier.hentz\lerobot\  
conda activate lerobot  
cd .\lerobot\  
conda create -y -n lerobot python=3.10  
conda activate lerobot  
conda install ffmpeg -c conda-forge  
ffmpeg -encoders  
conda install ffmpeg=7.1.1 -c conda-forge  
pip install av poetry-core
```

```

pip3 install --pre torch torchvision torchaudio --index-url
https://download.pytorch.org/whl/cu128
pip install -e .
python lerobot/scripts/train.py --dataset.repo_id=gautz/18650-test2-100ep --policy.type=act --
output_dir=outputs/train/act_so101_18650-test2-100ep --job_name=act_so101_18650-test2-100ep --
policy.device=cuda --wandb.enable=false

```

Enregistrer un dataset d'évaluation d'un modèle à un checkpoint donné :

```

python -m lerobot.record --robot.type=so101_follower --robot.port=/dev/ttyUSB0 --robot.cameras="{
top: {type: opencv, index_or_path: 2, width: 800, height: 600, fps: 30}, follower: {type: opencv,
index_or_path: 4, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --dataset.single_task="Pick
red 18650 battery place black box" --policy.path=outputs/train/act_so101_18650-test2-
100ep/checkpoints/last/pretrained_model --dataset.push_to_hub=False

```

Uploader un modèle vers HuggingFace

<https://github.com/huggingface/lerobot/?tab=readme-ov-file#add-a-pretrained-policy>

- Rechercher le dossier du Checkpoint voulu, par ex.

```
C:\Users\User\github\lerobot\outputs\train\act_so101_18650-test2-100ep\checkpoints\100000
```

- Définir le User HuggingFace (qui doit être Login via un Token) `gautz` et le Repo `act_so101_pick_red_18650_drop_black_box_test2_100ep_100000`, puis uploader le Checkpoint :

```
huggingface-cli.exe upload
gautz/act_so101_pick_red_18650_drop_black_box_test2_100ep_100000
.\outputs\train\act_so101_18650-test2-100ep\checkpoints\100000
```

Historique du Terminal complet

```

wget "https://repo.anaconda.com/miniconda/Miniconda3-latest-Windows-x86_64.exe" -outfile
"..\Downloads\Miniconda3-latest-Windows-x86_64.exe"
cd .\github\lerobot\
conda create -y -n lerobot python=3.10
conda activate lerobot
conda install ffmpeg -c conda-forge
conda install ffmpeg=7.1.1 -c conda-forge
wsl --shutdown
pip install -e .
pip install -e ".[feetech]" # or "[dynamixel]" for example
python lerobot/find_port.py
python lerobot/find_cameras.py opencv
python -m lerobot.setup_motors --robot.type=so101_follower --robot.port=COM13`
python -m lerobot.record --robot.type=so101_follower --robot.port=COM13 --robot.cameras="{

```

```
top: {type: opencv, index_or_path: 2, width: 800, height: 600, fps: 30}, follower: {type:
opencv, index_or_path: 4, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --
dataset.single_task="Pick red 18650 battery place black box" --
policy.path=outputs/train/act_so101_18650-test2-100ep/checkpoints/last/pretrained_model --
dataset.push_to_hub=False
python -m lerobot.calibrate      --teleop.type=so101_leader  --teleop.port=COM14 --
teleop.id=leader_arm_fan1`
python -m lerobot.calibrate      --robot.type=so101_follower  --robot.port=COM13 --
robot.id=follower_arm_fan1
python -m lerobot.teleoperate    --robot.type=so101_follower  --robot.port=COM13  --
robot.id=follower_arm_fan1  --robot.cameras="{ top: {type: opencv, index_or_path: 1, width:
640, height: 480, fps: 30}, follower: {type: opencv, index_or_path: 2, width: 640, height: 480,
fps: 30}}"  --teleop.type=so101_leader  --teleop.port=COM14  --teleop.id=leader_arm_fan1
--display_data=true
python lerobot/find_cameras.py opencv
python -m lerobot.teleoperate    --robot.type=so101_follower  --robot.port=COM13  --
robot.id=follower_arm_fan1  --robot.cameras="{ top: {type: opencv, index_or_path: 1, width:
800, height: 600, fps: 30}, follower: {type: opencv, index_or_path: 2, width: 800, height: 600,
fps: 30}}"  --teleop.type=so101_leader  --teleop.port=COM14  --teleop.id=leader_arm_fan1
--display_data=true
pip install -e .
python lerobot/find_cameras.py opencv
python -m lerobot.teleoperate    --robot.type=so101_follower  --robot.port=COM13  --
robot.id=follower_arm_fan1  --robot.cameras="{ top: {type: opencv, index_or_path: 1, width:
800, height: 600, fps: 30}, follower: {type: opencv, index_or_path: 0, width: 800, height: 600,
fps: 30}}"  --teleop.type=so101_leader  --teleop.port=COM14  --teleop.id=leader_arm_fan1
--display_data=true
python -m lerobot.record  --robot.type=so101_follower  --robot.port=COM13  --robot.cameras="{
top: {type: opencv, index_or_path: 1, width: 800, height: 600, fps: 30}, follower: {type:
opencv, index_or_path: 0, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --
dataset.single_task="Pick red 18650 battery place black box" --
policy.path=outputs/train/act_so101_18650-test2-100ep/checkpoints/last/pretrained_model --
dataset.push_to_hub=False
python lerobot/scripts/display_sys_info.py
python -m torch.utils.collect_env
python -c "import torch; print(torch.cuda.is_available())" && nvcc -V
python -c "import torch; print(torch.cuda.is_available())"
pip3 install --pre torch torchvision torchaudio --index-url
```

<https://download.pytorch.org/whl/cu128>

```
python -m lerobot.record --robot.type=sol101_follower --robot.port=COM13 --robot.cameras="{
top: {type: opencv, index_or_path: 1, width: 800, height: 600, fps: 30}, follower: {type:
opencv, index_or_path: 0, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --
dataset.single_task="Pick red 18650 battery place black box" --
policy.path=outputs/train/act_sol101_18650-test2-100ep/checkpoints/last/pretrained_model --
dataset.push_to_hub=False --wandb.enable=false

python -m lerobot.record --robot.type=sol101_follower --robot.port=COM13 --robot.cameras="{
top: {type: opencv, index_or_path: 1, width: 800, height: 600, fps: 30}, follower: {type:
opencv, index_or_path: 0, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --
dataset.single_task="Pick red 18650 battery place black box" --
policy.path=outputs/train/act_sol101_18650-test2-100ep/checkpoints/last/pretrained_model --
dataset.push_to_hub=False --dataset.episode_time_s=10 --dataset.reset_time_s=10 --
dataset.num_episodes=10
exit
cd .\github\lerobot\
conda activate lerobot
python -m lerobot.record --robot.type=sol101_follower --robot.port=COM13 --robot.cameras="{
top: {type: opencv, index_or_path: 1, width: 800, height: 600, fps: 30}, follower: {type:
opencv, index_or_path: 0, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --
dataset.single_task="Pick red 18650 battery place black box" --
policy.path=outputs/train/act_sol101_18650-test2-100ep/checkpoints/last/pretrained_model --
dataset.push_to_hub=False --dataset.episode_time_s=15 --dataset.reset_time_s=10 --
dataset.num_episodes=10
python -m lerobot.teleoperate --robot.type=sol101_follower --robot.port=COM13 --
robot.id=follower_arm_fan1 --robot.cameras="{ top: {type: opencv, index_or_path: 1, width:
800, height: 600, fps: 30}, follower: {type: opencv, index_or_path: 0, width: 800, height: 600,
fps: 30}}" --teleop.type=sol101_leader --teleop.port=COM14 --teleop.id=leader_arm_fan1
--display_data=true
exit
cd .\github\lerobot\
conda activate lerobot
python -m lerobot.teleoperate --robot.type=sol101_follower --robot.port=COM13 --
robot.id=follower_arm_fan1 --robot.cameras="{ top: {type: opencv, index_or_path: 1, width:
800, height: 600, fps: 30}, follower: {type: opencv, index_or_path: 0, width: 800, height: 600,
fps: 30}}" --teleop.type=sol101_leader --teleop.port=COM14 --teleop.id=leader_arm_fan1
--display_data=true
```

```
python lerobot/find_port.py
python -m lerobot.teleoperate --robot.type=sol101_follower --robot.port=COM15 --
robot.id=follower_arm_fan1 --robot.cameras="{ top: {type: opencv, index_or_path: 1, width:
800, height: 600, fps: 30},follower: {type: opencv, index_or_path: 0, width: 800, height: 600,
fps: 30}}" --teleop.type=sol101_leader --teleop.port=COM14 --teleop.id=leader_arm_fan1
--display_data=true
python lerobot/find_cameras.py opencv
python -m lerobot.teleoperate --robot.type=sol101_follower --robot.port=COM15 --
robot.id=follower_arm_fan1 --robot.cameras="{ top: {type: opencv, index_or_path: 0, width:
800, height: 600, fps: 30},follower: {type: opencv, index_or_path: 2, width: 800, height: 600,
fps: 30}}" --teleop.type=sol101_leader --teleop.port=COM14 --teleop.id=leader_arm_fan1
--display_data=true
python -m lerobot.record --robot.type=sol101_follower --robot.port=COM15 --robot.cameras="{
top: {type: opencv, index_or_path: 1, width: 800, height: 600, fps: 30},follower: {type:
opencv, index_or_path: 0, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --
dataset.single_task="Pick red 18650 battery place black box" --
policy.path=outputs/train/act_sol101_18650-test2-100ep/checkpoints/last/pretrained_model --
dataset.push_to_hub=False --dataset.episode_time_s=15 --dataset.reset_time_s=10 --
dataset.num_episodes=10
python -m lerobot.record --robot.type=sol101_follower --robot.port=COM15 --robot.cameras="{
top: {type: opencv, index_or_path: 0, width: 800, height: 600, fps: 30},follower: {type:
opencv, index_or_path: 2, width: 800, height: 600, fps: 30}}" --robot.id=follower_arm_fan1 --
display_data=false --dataset.repo_id=gautz/eval_act_18650-test2-100ep --
dataset.single_task="Pick red 18650 battery place black box" --
policy.path=outputs/train/act_sol101_18650-test2-100ep/checkpoints/last/pretrained_model --
dataset.push_to_hub=False --dataset.episode_time_s=15 --dataset.reset_time_s=10 --
dataset.num_episodes=10
python -m lerobot.teleoperate --robot.type=sol101_follower --robot.port=COM15 --
robot.id=follower_arm_fan1 --robot.cameras="{ top: {type: opencv, index_or_path: 0, width:
800, height: 600, fps: 30},follower: {type: opencv, index_or_path: 2, width: 800, height: 600,
fps: 30}}" --teleop.type=sol101_leader --teleop.port=COM14 --teleop.id=leader_arm_fan1
--display_data=true
cd .\github\lerobot\
cd ..
cd .\cache\
cd .\huggingface\ls
cd .\huggingface\lerobot\calibration\cd ..
cd .\huggingface\lerobot\
cd .\gautz\
```

```
cd ..  
cd .\github\lerobot\  
cd .\outputs\train\  
cd .\act_so101_18650-test2-100ep\  
cd .\checkpoints\  

```

Migration dataset v2.1 to v3

<https://github.com/huggingface/lerobot/blob/main/docs/source/lerobot-dataset-v3.mdx#migrate-v21--v30>

Sources

https://wiki.seeedstudio.com/lerobot_so100m/

https://huggingface.co/spaces/lerobot/visualize_dataset?path=%2Fsebastiandavidlee%2Fbimanual-so101-handover-plushie%2Fepisode_40

<https://huggingface.co/blog/sherryxychen/train-act-on-so-101>

https://github.com/sherrychen1120/so101_bench

https://www.linkedin.com/posts/sherryxychen_robotics-machinelearning-ai-ugcPost-7378831270207954944-

[WsI5?utm_source=share&utm_medium=member_desktop&rcm=ACoAAA1icaQBkYXRoM1Oslzrh8psuL0MmHpaT_4](https://www.linkedin.com/posts/sherryxychen_robotics-machinelearning-ai-ugcPost-7378831270207954944-?utm_source=share&utm_medium=member_desktop&rcm=ACoAAA1icaQBkYXRoM1Oslzrh8psuL0MmHpaT_4)

Démo AICA YOLO Portes Ouvertes 2026

Mise en place

Après avoir récupéré le robot UR5e et l'armoire à roulettes qui contient le PC AICA :

- Brancher l'alimentation du robot UR5e et du PC AICA
- La webcam et le dongle Wifi sont branchés en USB sur le PC
- On a une paire de ciseau ou autre
- Le câble Ethernet relie le PC AICA et le contrôleur de l'UR5e
- On démarre le PC et le robot.
- Adresse IP de l'UR5e : 192.168.0.10

Sur le teach panel du robot :

- Pour connaître l'adresse IP du robot : Cliquer sur les 3 petits points en haut à droite, puis À propos
- Cliquer en bas à gauche sur le bouton rouge
- Cliquer deux fois sur On pour allumer le robot puis quitter
- Basculer en haut à droite sur le mode Remote Control
- Le robot est prêt pour être commandé par AICA
- Pour la sécurité lors du pilotage par AICA : Une personne tient le teach panel et reste prêt à déclencher le bouton d'arrêt

Sur le PC AICA :

- Adresse IP de l'ordinateur : 192.168.0.1
- On se connecte à Ubuntu à l'aide du compte étudiant.

MDP :

Ensuite, on se connecte au Wifi Osiris (ouvert)

On ouvre le navigateur et on se connecte avec les identifiants Unistra ou

Portes ouvertes :

Login : Conf-jpoiha

MDP : demander à M. Le Normand.

- Ouvrir l'explorateur de fichiers et cliquer sur le raccourci « aica launcher »
Dans le dossier /home/etudiant/aica/aica-launcher.../ on lance l'exécutable AICA Launcher
- Sélectionner la configuration GPU et Cliquer sur « launcher AICA Studio »
- On se retrouve sur la page d'identification de AICA Studio
- Cliquer sur Login, à droite de tp1@unistra.fr
- Le MDP du compte tp1@unistra.fr est dans le fichier /home/etudiant/aica/mdp.txt.
- Sélectionner le Programme yolo
- OU créer un nouveau programme en y copiant le code ci-dessous puis cliquer sur Generate Program
- Cliquer sur Start
- Accès à RViz depuis le menu launcher en haut à droite
- Dans RViz, une fois que le programme YOLO est Start,
- cliquer en bas à gauche sur Add, puis by topic, puis tout en bas sur yolo > annotated_image > image
- On visualise ainsi l'image annotée de YOLO
- Dans RViz afficher le collision box marker, cf.

<https://docs.aica.tech/core/examples/core-components/colliders#box-collider-example>

Déroulement de la démo

- On prend une paire de ciseaux
- Quand ils sont au centre ou hors de l'image, le robot s'arrête
- Quand ils sont au Nord, Sud, Est, Ouest de l'image, l'UR5e se déplace dans les 4 directions du plan X,Y

Ce qu'on peut montrer en plus :

- Dans le bloc Bounding Box tracker adapter les gains de commande du robot pour qu'il aille plus ou moins vite
- Dans le bloc Yolo, on peut changer le type d'objet à suivre en remplaçant `scissors` par une des classes traitées par Yolo, par exemple un `sandwich` , une `bottle` ou une `apple` cf.

<https://gist.github.com/rcland12/dc48e1963268ff98c8b2c4543e7a9be8>

- Contraindre le mouvement dans une Collision Box, cf. code ci-dessous

- Piloter le robot via un Point Attractor et contraindre son mouvement dans une Collision Box, cf. code ci-dessous

Ranger la démo

- Passer le teach panel en mode manuel et remettre le robot dans sa position de repos
- Cliquer en bas à gauche sur le bouton vert puis stopper le contrôleur
- Cliquer en haut à droite sur les trois points puis arrêter le robot
- Quitter AICA Studio en cliquant en haut à droite sur Launcher > Force Stop
- Fermer la fenêtre
- Eteindre le PC
- Débrancher PC et UR5e
- voir la section mise-en-place à l'envers

Si le programme AICA ne veut plus se stopper :

- Cliquer en haut sur hardware puis revenir sur programme
- Si ça ne fonctionne toujours pas, relancer le launcher en cliquant en haut à droite sur le menu Launcher, Force Stop puis redémarrer AICA Studio.

Programme YOLO avec UR5e

vérifier l'adresse IP du robot

```
schema: 2-0-6
dependencies:
  core: v5.1.0
on_start:
  load:
    - hardware: hardware
    - component: camera_streamer
components:
  yolo_executor:
    component: advanced_perception::object_detection::YoloExecutor
    display_name: YOLO Executor
  events:
  transitions:
```

```
    on_load:
      lifecycle:
        component: yolo_executor
        transition: configure
    on_configure:
      lifecycle:
        component: yolo_executor
        transition: activate
    on_activate:
      load:
        component: bounding_box_tracker
parameters:
  model_file:
    value: /yolo-example-data/yolo12n.onnx
    type: string
  classes_file:
    value: /yolo-example-data/coco.yaml
    type: string
  object_class:
    value:
      - scissors
    type: string_array
  conf_threshold:
    value: 0.4
    type: double
  num_threads:
    value: 2
    type: int
inputs:
  image: /camera_streamer/image
outputs:
  detections: /yolo_executor/detections
camera_streamer:
  component: core_vision_components::image_streaming::CameraStreamer
  display_name: Camera Streamer
events:
  transitions:
    on_load:
      lifecycle:
        component: camera_streamer
```

```
    transition: configure
  on_configure:
    lifecycle:
      component: camera_streamer
      transition: activate
  on_activate:
    load:
      component: yolo_executor
parameters:
  camera_frame:
    value: tool0
    type: string
outputs:
  image: /camera_streamer/image
bounding_box_tracker:
  component: object_detection_utils::BoundingBoxTracker
  display_name: Bounding box tracker
events:
  transitions:
    on_load:
      lifecycle:
        component: bounding_box_tracker
        transition: configure
    on_configure:
      lifecycle:
        component: bounding_box_tracker
        transition: activate
parameters:
  rate:
    value: 500
    type: double
inputs:
  detections: /yolo_executor/detections
outputs:
  twist: /yolo_to_marker/twist
hardware:
  hardware:
    display_name: Hardware Interface
    urdf: Universal Robots 5e
    rate: 500
```

events:

transitions:

on_load:

load:

- controller: robot_state_broadcaster
hardware: hardware
- controller: joint_trajectory_controller
hardware: hardware
- controller: ur_dashboard_controller
hardware: hardware
- controller: ik_velocity_controller
hardware: hardware

parameters:

headless_mode: "true"

robot_ip: 192.168.0.10

script_filename:

/ws/install/ur_client_library/share/ur_client_library/resources/external_control.urscript

controllers:

robot_state_broadcaster:

plugin: aica_core_controllers/RobotStateBroadcaster

events:

transitions:

on_load:

switch_controllers:

hardware: hardware

activate: robot_state_broadcaster

joint_trajectory_controller:

plugin: aica_core_controllers/trajectory/JointTrajectoryController

events:

predicates:

has_trajectory_succeeded:

call_service:

controller: ur_dashboard_controller

hardware: hardware

service: hand_back_control

transitions:

on_activate:

sequence:

start: sequence

ur_dashboard_controller:

```
plugin: aica_ur_controllers/URDashboardController
```

```
events:
```

```
  predicates:
```

```
    program_running:
```

```
      switch_controllers:
```

```
        hardware: hardware
```

```
        activate: joint_trajectory_controller
```

```
    hand_back_control_success:
```

```
      application: stop
```

```
  transitions:
```

```
    on_load:
```

```
      switch_controllers:
```

```
        hardware: hardware
```

```
        activate: ur_dashboard_controller
```

```
ik_velocity_controller:
```

```
  plugin: aica_core_controllers/velocity/IKVelocityController
```

```
  inputs:
```

```
    command: /yolo_to_marker/twist
```

```
  events:
```

```
    transitions:
```

```
      on_load:
```

```
        switch_controllers:
```

```
          hardware: hardware
```

```
          activate: ik_velocity_controller
```

```
graph:
```

```
  positions:
```

```
    on_start:
```

```
      x: -20
```

```
      y: -360
```

```
  stop:
```

```
    x: -20
```

```
    y: -260
```

```
  components:
```

```
    yolo_executor:
```

```
      x: 740
```

```
      y: -180
```

```
    camera_streamer:
```

```
      x: 200
```

```
      y: -300
```

```
    bounding_box_tracker:
```

x: 1400

y: 180

hardware:

hardware:

x: 1940

y: -360

edges:

yolo_to_marker_marker_pose_signal_point_attractor_attractor:

path:

- x: 1360

y: 520

- x: 1360

y: 680

yolo_executor_detections_yolo_to_marker_json_input:

path:

- x: 1160

y: 120

- x: 1160

y: 220

- x: 860

y: 220

- x: 860

y: 520

yolo_to_marker_twist_hardware_hardware_ik_velocity_controller_command:

path:

- x: 1820

y: 380

- x: 1820

y: 420

yolo_executor_detections_yolo_to_marker_detections:

path:

- x: 1200

y: 120

- x: 1200

y: 380

on_start_on_start_camera_streamer_camera_streamer:

path:

- x: 140

y: -300

- x: 140

y: -240

yolo_executor_on_activate_bounding_box_tracker_bounding_box_tracker:

path:

- x: 1300

y: 0

- x: 1300

y: 240

hardware_hardware_joint_trajectory_controller_has_trajectory_succeeded_hardware_hardware_ur_dashboard_controller_hand_back_control:

path:

- x: 1920

y: 400

- x: 1920

y: 900

hardware_hardware_ur_dashboard_controller_program_running_hardware_hardware_joint_trajectory_controller:

path:

- x: 1920

y: 820

- x: 1920

y: 240

hardware_hardware_ur_dashboard_controller_hand_back_control_success_on_stop_on_stop:

path:

- x: -40

y: 780

- x: -40

y: -200

camera_streamer_image_yolo_executor_image:

path:

- x: 640

y: -40

- x: 640

y: 120

yolo_executor_detections_bounding_box_tracker_detections:

path:

- x: 1220

y: 120

- x: 1220

```
    y: 400
bounding_box_tracker_twist_hardware_hardware_ik_velocity_controller_command:
  path:
    - x: 1860
      y: 400
    - x: 1860
      y: 1120
```

Programme UR5e avec YOLO et Bounding Box

- Dans RViz afficher le collision box marker, cf. <https://docs.aica.tech/core/examples/core-components/colliders#box-collider-example>

```
schema: 2-0-6
dependencies:
  core: v4.0.0
frames:
  start:
    reference_frame: world
    position:
      x: 0.016268
      y: 0.460877
      z: 0.574409
    orientation:
      w: 0.000502
      x: 0.999979
      y: -0.005594
      z: -0.003165
on_start:
  load:
    - component: frame_broadcaster
    - hardware: hardware
  sequence:
    start: sequence
sequences:
```

sequence:

display_name: Sequence

steps:

- check:

condition:

controller: joint_trajectory_controller

hardware: hardware

predicate: has_trajectory_succeeded

wait_forever: true

- call_service:

controller: ur_dashboard_controller

hardware: hardware

service: zero_ftsensor

- check:

condition:

controller: ur_dashboard_controller

hardware: hardware

predicate: zero_ftsensor_success

wait_forever: true

- switch_controllers:

hardware: hardware

deactivate: joint_trajectory_controller

components:

frame_broadcaster:

component: aica_core_components::ros::StaticFrameBroadcaster

display_name: Frame Broadcaster

parameters:

frame:

value: camera_link

type: string

reference_frame:

value: ur_tool0

type: string

pose_values:

value:

- -0.02

- -0.11752

- 0.032

- 1

- 0

```
- 0
- 0
type: double_array
broadcast_periodically:
  value: true
  type: bool
yolo_executor:
  component: advanced_perception::object_detection::YoloExecutor
  display_name: YOLO Executor
  events:
    transitions:
      on_load:
        lifecycle:
          component: yolo_executor
          transition: configure
      on_configure:
        lifecycle:
          component: yolo_executor
          transition: activate
      on_activate:
        load:
          component: bounding_box_tracker
parameters:
  rate:
    value: 30
    type: double
  model_file:
    value: /data/models/yolol12n.onnx
    type: string
  classes_file:
    value: /data/models/coco.yaml
    type: string
  object_class:
    value:
      - scissors
    type: string_array
  conf_threshold:
    value: 0.4
    type: double
inputs:
```

```
  image: /camera_streamer/image
outputs:
  detections: /yolo_executor/detections
bounding_box_tracker:
  component: object_detection_utils::BoundingBoxTracker
  display_name: Bounding box tracker
  events:
    transitions:
      on_load:
        lifecycle:
          component: bounding_box_tracker
          transition: configure
      on_configure:
        lifecycle:
          component: bounding_box_tracker
          transition: activate
parameters:
  rate:
    value: 100
    type: double
  gains:
    value:
      - 0.008
      - 0.008
    type: double_array
  decay_rate:
    value: 8
    type: double
  reference_frame:
    value: world
    type: string
inputs:
  detections: /yolo_executor/detections
outputs:
  twist: /bounding_box_tracker/twist
box_collider:
  component: aica_core_components::utility::BoxCollider
  display_name: Box Collider
  events:
    predicates:
```

```
is_out_of_bounds:
  set:
    parameter: gains
    value:
      - 0
      - 0
    type: double_array
    component: bounding_box_tracker
is_in_bounds:
  set:
    parameter: gains
    value:
      - 0.008
      - 0.008
    type: double_array
    component: bounding_box_tracker
transitions:
  on_load:
    lifecycle:
      component: box_collider
      transition: configure
  on_configure:
    lifecycle:
      component: box_collider
      transition: activate
parameters:
  x_size:
    value: 0.8
    type: double
  y_size:
    value: 0.3
    type: double
  z_size:
    value: 0.5
    type: double
inputs:
  target: /hardware/robot_state_broadcaster/cartesian_state
  center: /frame_to_signal/pose
frame_to_signal:
  component: aica_core_components::ros::TfToSignal
```

display_name: Frame to Signal

events:

transitions:

on_load:

lifecycle:

component: frame_to_signal

transition: configure

on_configure:

lifecycle:

component: frame_to_signal

transition: activate

on_activate:

load:

component: box_collider

parameters:

frame:

value: start

type: string

outputs:

pose: /frame_to_signal/pose

camera_streamer:

component: core_vision_components::image_streaming::CameraStreamer

display_name: Camera Streamer

events:

transitions:

on_load:

load:

- component: yolo_executor

- component: frame_to_signal

lifecycle:

component: camera_streamer

transition: configure

on_configure:

lifecycle:

component: camera_streamer

transition: activate

outputs:

image: /camera_streamer/image

hardware:

hardware:

```
display_name: Hardware Interface
urdf: Universal Robots 5e
rate: 500
events:
  transitions:
    on_load:
      load:
        - controller: robot_state_broadcaster
          hardware: hardware
        - controller: joint_trajectory_controller
          hardware: hardware
        - controller: ur_impedance_controller
          hardware: hardware
        - controller: ur_dashboard_controller
          hardware: hardware
parameters:
  robot_ip: 192.168.56.101
controllers:
  ur_dashboard_controller:
    plugin: aica_ur_controllers/URDashboardController
    events:
      transitions:
        on_load:
          switch_controllers:
            hardware: hardware
            activate: ur_dashboard_controller
  joint_trajectory_controller:
    plugin: aica_core_controllers/trajectory/JointTrajectoryController
    events:
      transitions:
        on_load:
          switch_controllers:
            hardware: hardware
            activate: joint_trajectory_controller
        on_deactivate:
          load:
            component: camera_streamer
          switch_controllers:
            hardware: hardware
            activate: ur_impedance_controller
```

```
  on_activate:
    call_service:
      controller: joint_trajectory_controller
      hardware: hardware
      service: set_trajectory
      payload: |-
        frames:
          - start
        durations:
          - 2.0
robot_state_broadcaster:
  plugin: aica_core_controllers/RobotStateBroadcaster
  outputs:
    cartesian_state: /hardware/robot_state_broadcaster/cartesian_state
    ft_sensor: /hardware/robot_state_broadcaster/ft_sensor
  events:
    transitions:
      on_load:
        switch_controllers:
          hardware: hardware
          activate: robot_state_broadcaster
ur_impedance_controller:
  plugin: aica_ur_controllers/URImpedanceController
  parameters:
    selection_vector:
      value:
        - 1
        - 1
        - 1
        - 0
        - 0
        - 1
      type: int_array
    force_limit:
      value:
        - 40
        - 40
        - 40
        - 30
        - 30
```

```
- 30
  type: vector
stiffness:
  value:
    - 500
    - 500
    - 500
    - 400
    - 400
    - 400
  type: vector
damping:
  value:
    - 50
    - 50
    - 50
    - 10
    - 10
    - 10
  type: vector
inputs:
  command: /bounding_box_tracker/twist
```

graph:

positions:

on_start:

x: -740

y: -360

stop:

x: -740

y: -260

components:

frame_broadcaster:

x: -420

y: -580

yolo_executor:

x: 760

y: 480

bounding_box_tracker:

x: 1300

y: 600

box_collider:

x: 840

y: 1020

frame_to_signal:

x: 280

y: 1140

camera_streamer:

x: 180

y: 520

hardware:

hardware:

x: 1880

y: -360

sequences:

sequence:

x: -420

y: -280

edges:

yolo_to_marker_marker_pose_signal_point_attractor_attractor:

path:

- x: 1360

y: 520

- x: 1360

y: 680

yolo_executor_detections_yolo_to_marker_json_input:

path:

- x: 1160

y: 120

- x: 1160

y: 220

- x: 860

y: 220

- x: 860

y: 520

yolo_to_marker_twist_hardware_hardware_ik_velocity_controller_command:

path:

- x: 1740

y: 680

- x: 1740

y: 920

yolo_to_marker_twist_hardware_hardware_velocity_impedance_controller_command:

path:

- x: 1740
- y: 680
- x: 1740
- y: 920

hardware_hardware_robot_state_broadcaster_ft_sensor_hardware_hardware_velocity_impedance_controller_ft_sensor:

path:

- x: 1840
- y: 700
- x: 1840
- y: 960

hardware_hardware_ur_dashboard_controller_zero_ftsensor_success_sequence_sequence_condition_input_2:

path:

- x: -60
- y: 80

yolo_to_marker_on_activate_hardware_hardware_ur_impedance_controller:

path:

- x: 1840
- y: 700
- x: 1840
- y: 1060

yolo_to_marker_twist_hardware_hardware_ur_impedance_controller_command:

path:

- x: 1740
- y: 780
- x: 1740
- y: 1220

orbbeccamera_on_load_yolo_executor_yolo_executor:

path:

- x: 680
- y: 620
- x: 680
- y: 540

orbbeccamera_on_load_frame_to_signal_frame_to_signal:

path:

- x: 680
- y: 620
- x: 680
- y: 1020
- x: 240
- y: 1020
- x: 240
- y: 1200

orbbec_camera_color_image_yolo_executor_image:

 path:

- x: 640
- y: 700
- x: 640
- y: 780

on_start_on_start_frame_broadcaster_frame_broadcaster:

 path:

- x: -540
- y: -300
- x: -540
- y: -520

on_start_on_start_sequence_sequence:

 path:

- x: -540
- y: -300
- x: -540
- y: -220

hardware_joint_trajectory_controller_has_trajectory_succeeded_condition_sequence_sequence_condition_input_0:

 path:

- x: -380
- y: 440

sequence_sequence_event_trigger_1_hardware_hardware_ur_dashboard_controller_zero_ftsensor:

 path:

- x: -220
- y: 140

hardware_ur_dashboard_controller_zero_ftsensor_success_condition_sequence_sequence_condition_input_2:

 path:

```
- x: -60
  y: 60
sequence_sequence_event_trigger_3_hardware_hardware_joint_trajectory_controller:
  path:
    - x: 100
      y: 200
box_collider_is_out_of_bounds_bounding_box_tracker_bounding_box_tracker:
  path:
    - x: 1400
      y: 1280
    - x: 1400
      y: 1000
    - x: 1280
      y: 1000
    - x: 1280
      y: 660
box_collider_is_in_bounds_bounding_box_tracker_bounding_box_tracker:
  path:
    - x: 1360
      y: 1240
    - x: 1360
      y: 1040
    - x: 1260
      y: 1040
    - x: 1260
      y: 660
frame_to_signal_on_activate_box_collider_box_collider:
  path:
    - x: 800
      y: 1320
    - x: 800
      y: 1080
camera_streamer_on_load_yolo_executor_yolo_executor:
  path:
    - x: 620
      y: 700
    - x: 620
      y: 540
camera_streamer_on_load_frame_to_signal_frame_to_signal:
  path:
```

```
- x: 620
  y: 700
- x: 620
  y: 1060
- x: 260
  y: 1060
- x: 260
  y: 1200
```

hardwareHardwareJointTrajectoryControllerOnDeactivateCameraStreamerCameraStreamer:

path:

```
- x: 100
  y: 360
- x: 100
  y: 580
```

hardwareHardwareJointTrajectoryControllerOnDeactivateHardwareHardwareUrImpedanceController:

path:

```
- x: 1820
  y: 360
- x: 1820
  y: 1040
```

hardwareHardwareJointTrajectoryControllerOnActivateHardwareHardwareJointTrajectoryControllerSetTrajectory:

path:

```
- x: 1800
  y: 320
- x: 1800
  y: 520
```

yolo_executor_detections_bounding_box_tracker_detections:

path:

```
- x: 1240
  y: 780
- x: 1240
  y: 820
```

bounding_box_tracker_twistHardwareHardwareUrImpedanceControllerCommand:

path:

```
- x: 1760
```

```
    y: 820
  - x: 1760
    y: 1200
hardware_robot_state_broadcaster_cartesian_state_box_collider_target:
  path:
  - x: 740
    y: 940
  - x: 740
    y: 1360
```

Programme UR5e avec Point Attractor et Bounding Box

- Dans RViz afficher le collision box marker, cf.

<https://docs.aica.tech/core/examples/core-components/colliders#box-collider-example>

```
schema: 2-0-6
dependencies:
  core: v4.0.0
frames:
  start:
    reference_frame: world
    position:
      x: 0.016268
      y: 0.460877
      z: 0.574409
    orientation:
      w: 0.000502
      x: 0.999979
      y: -0.005594
      z: -0.003165
  on_start:
    load:
      - component: frame_broadcaster
      - hardware: hardware
  sequence:
```

```
start: sequence
sequences:
  sequence:
    display_name: Sequence
    steps:
      - check:
          condition:
            controller: joint_trajectory_controller
            hardware: hardware
            predicate: has_trajectory_succeeded
            wait_forever: true
      - call_service:
          controller: ur_dashboard_controller
          hardware: hardware
          service: zero_ftsensor
      - check:
          condition:
            controller: ur_dashboard_controller
            hardware: hardware
            predicate: zero_ftsensor_success
            wait_forever: true
      - switch_controllers:
          hardware: hardware
          deactivate: joint_trajectory_controller
components:
  frame_broadcaster:
    component: aica_core_components::ros::StaticFrameBroadcaster
    display_name: Frame Broadcaster
    parameters:
      frame:
        value: camera_link
        type: string
      reference_frame:
        value: ur_tool0
        type: string
      pose_values:
        value:
          - -0.02
          - -0.11752
          - 0.032
```

```
- 1
- 0
- 0
- 0
type: double_array
broadcast_periodically:
  value: true
  type: bool
yolo_executor:
  component: advanced_perception::object_detection::YoloExecutor
  display_name: YOLO Executor
  events:
    transitions:
      on_load:
        lifecycle:
          component: yolo_executor
          transition: configure
      on_configure:
        lifecycle:
          component: yolo_executor
          transition: activate
      on_activate:
        load:
          component: bounding_box_tracker
parameters:
  rate:
    value: 30
    type: double
  model_file:
    value: /data/models/yolo12n.onnx
    type: string
  classes_file:
    value: /data/models/coco.yaml
    type: string
  object_class:
    value:
      - scissors
    type: string_array
  conf_threshold:
    value: 0.4
```

```
    type: double
inputs:
  image: /camera_streamer/image
outputs:
  detections: /yolo_executor/detections
bounding_box_tracker:
  component: object_detection_utils::BoundingBoxTracker
  display_name: Bounding box tracker
  events:
    transitions:
      on_load:
        lifecycle:
          component: bounding_box_tracker
          transition: configure
      on_configure:
        lifecycle:
          component: bounding_box_tracker
          transition: activate
parameters:
  rate:
    value: 100
    type: double
  gains:
    value:
      - 0.008
      - 0.008
    type: double_array
  decay_rate:
    value: 8
    type: double
  reference_frame:
    value: world
    type: string
inputs:
  detections: /yolo_executor/detections
outputs:
  twist: /bounding_box_tracker/twist
box_collider:
  component: aica_core_components::utility::BoxCollider
  display_name: Box Collider
```

```
events:
  predicates:
    is_out_of_bounds:
      set:
        parameter: gains
        value:
          - 0
          - 0
        type: double_array
        component: bounding_box_tracker
    is_in_bounds:
      set:
        parameter: gains
        value:
          - 0.008
          - 0.008
        type: double_array
        component: bounding_box_tracker
  transitions:
    on_load:
      lifecycle:
        component: box_collider
        transition: configure
    on_configure:
      lifecycle:
        component: box_collider
        transition: activate
parameters:
  x_size:
    value: 0.8
    type: double
  y_size:
    value: 0.3
    type: double
  z_size:
    value: 0.5
    type: double
inputs:
  target: /hardware/robot_state_broadcaster/cartesian_state
  center: /frame_to_signal/pose
```

```
frame_to_signal:
  component: aica_core_components::ros::TfToSignal
  display_name: Frame to Signal
  events:
    transitions:
      on_load:
        lifecycle:
          component: frame_to_signal
          transition: configure
      on_configure:
        lifecycle:
          component: frame_to_signal
          transition: activate
      on_activate:
        load:
          component: box_collider
  parameters:
    frame:
      value: start
      type: string
  outputs:
    pose: /frame_to_signal/pose
camera_streamer:
  component: core_vision_components::image_streaming::CameraStreamer
  display_name: Camera Streamer
  events:
    transitions:
      on_load:
        load:
          - component: yolo_executor
          - component: frame_to_signal
        lifecycle:
          component: camera_streamer
          transition: configure
      on_configure:
        lifecycle:
          component: camera_streamer
          transition: activate
  outputs:
    image: /camera_streamer/image
```

```
hardware:
  hardware:
    display_name: Hardware Interface
    urdf: Universal Robots 5e
    rate: 500
    events:
      transitions:
        on_load:
          load:
            - controller: robot_state_broadcaster
              hardware: hardware
            - controller: joint_trajectory_controller
              hardware: hardware
            - controller: ur_impedance_controller
              hardware: hardware
            - controller: ur_dashboard_controller
              hardware: hardware
    parameters:
      robot_ip: 192.168.56.101
    controllers:
      ur_dashboard_controller:
        plugin: aica_ur_controllers/URDashboardController
        events:
          transitions:
            on_load:
              switch_controllers:
                hardware: hardware
                activate: ur_dashboard_controller
      joint_trajectory_controller:
        plugin: aica_core_controllers/trajectory/JointTrajectoryController
        events:
          transitions:
            on_load:
              switch_controllers:
                hardware: hardware
                activate: joint_trajectory_controller
            on_deactivate:
              load:
                component: camera_streamer
              switch_controllers:
```

```
    hardware: hardware
    activate: ur_impedance_controller
  on_activate:
    call_service:
      controller: joint_trajectory_controller
      hardware: hardware
      service: set_trajectory
      payload: |-
        frames:
          - start
        durations:
          - 2.0
  robot_state_broadcaster:
    plugin: aica_core_controllers/RobotStateBroadcaster
    outputs:
      cartesian_state: /hardware/robot_state_broadcaster/cartesian_state
      ft_sensor: /hardware/robot_state_broadcaster/ft_sensor
    events:
      transitions:
        on_load:
          switch_controllers:
            hardware: hardware
            activate: robot_state_broadcaster
  ur_impedance_controller:
    plugin: aica_ur_controllers/URImpedanceController
    parameters:
      selection_vector:
        value:
          - 1
          - 1
          - 1
          - 0
          - 0
          - 1
        type: int_array
      force_limit:
        value:
          - 40
          - 40
          - 40
```

```
- 30
- 30
- 30
  type: vector
stiffness:
  value:
    - 500
    - 500
    - 500
    - 400
    - 400
    - 400
  type: vector
damping:
  value:
    - 50
    - 50
    - 50
    - 10
    - 10
    - 10
  type: vector
inputs:
  command: /bounding_box_tracker/twist
```

graph:

positions:

on_start:

x: -740

y: -360

stop:

x: -740

y: -260

components:

frame_broadcaster:

x: -420

y: -580

yolo_executor:

x: 760

y: 480

bounding_box_tracker:

```
x: 1300
y: 600
box_collider:
  x: 840
  y: 1020
frame_to_signal:
  x: 280
  y: 1140
camera_streamer:
  x: 180
  y: 520
hardware:
  hardware:
    x: 1880
    y: -360
sequences:
  sequence:
    x: -420
    y: -280
edges:
  yolo_to_marker_marker_pose_signal_point_attractor_attractor:
    path:
      - x: 1360
        y: 520
      - x: 1360
        y: 680
  yolo_executor_detections_yolo_to_marker_json_input:
    path:
      - x: 1160
        y: 120
      - x: 1160
        y: 220
      - x: 860
        y: 220
      - x: 860
        y: 520
  yolo_to_marker_twist_hardware_hardware_ik_velocity_controller_command:
    path:
      - x: 1740
        y: 680
```

- x: 1740

y: 920

yolo_to_marker_twist_hardware_hardware_velocity_impedance_controller_command:

path:

- x: 1740

y: 680

- x: 1740

y: 920

hardware_hardware_robot_state_broadcaster_ft_sensor_hardware_hardware_velocity_impedance_controller_ft_sensor:

path:

- x: 1840

y: 700

- x: 1840

y: 960

hardware_hardware_ur_dashboard_controller_zero_ftsensor_success_sequence_sequence_condition_input_2:

path:

- x: -60

y: 80

yolo_to_marker_on_activate_hardware_hardware_ur_impedance_controller:

path:

- x: 1840

y: 700

- x: 1840

y: 1060

yolo_to_marker_twist_hardware_hardware_ur_impedance_controller_command:

path:

- x: 1740

y: 780

- x: 1740

y: 1220

orbbec_camera_on_load_yolo_executor_yolo_executor:

path:

- x: 680

y: 620

- x: 680

y: 540

orbbeec_camera_on_load_frame_to_signal_frame_to_signal:

path:

- x: 680
y: 620
- x: 680
y: 1020
- x: 240
y: 1020
- x: 240
y: 1200

orbbeec_camera_color_image_yolo_executor_image:

path:

- x: 640
y: 700
- x: 640
y: 780

on_start_on_start_frame_broadcaster_frame_broadcaster:

path:

- x: -540
y: -300
- x: -540
y: -520

on_start_on_start_sequence_sequence:

path:

- x: -540
y: -300
- x: -540
y: -220

hardware_joint_trajectory_controller_has_trajectory_succeeded_condition_sequence_sequence_condition_input_0:

path:

- x: -380
y: 440

sequence_sequence_event_trigger_1_hardware_hardware_ur_dashboard_controller_zero_ftsensor:

path:

- x: -220
y: 140

hardware_ur_dashboard_controller_zero_ftsensor_success_condition_sequence_sequence_condition_i

```
nput_2:
  path:
    - x: -60
      y: 60
sequence_sequence_event_trigger_3_hardware_hardware_joint_trajectory_controller:
  path:
    - x: 100
      y: 200
box_collider_is_out_of_bounds_bounding_box_tracker_bounding_box_tracker:
  path:
    - x: 1400
      y: 1280
    - x: 1400
      y: 1000
    - x: 1280
      y: 1000
    - x: 1280
      y: 660
box_collider_is_in_bounds_bounding_box_tracker_bounding_box_tracker:
  path:
    - x: 1360
      y: 1240
    - x: 1360
      y: 1040
    - x: 1260
      y: 1040
    - x: 1260
      y: 660
frame_to_signal_on_activate_box_collider_box_collider:
  path:
    - x: 800
      y: 1320
    - x: 800
      y: 1080
camera_streamer_on_load_yolo_executor_yolo_executor:
  path:
    - x: 620
      y: 700
    - x: 620
      y: 540
```

camera_streamer_on_load_frame_to_signal_frame_to_signal:

path:

- x: 620
- y: 700
- x: 620
- y: 1060
- x: 260
- y: 1060
- x: 260
- y: 1200

hardware_hardware_joint_trajectory_controller_on_deactivate_camera_streamer_camera_streamer:

path:

- x: 100
- y: 360
- x: 100
- y: 580

hardware_hardware_joint_trajectory_controller_on_deactivate_hardware_hardware_ur_impedance_controller:

path:

- x: 1820
- y: 360
- x: 1820
- y: 1040

hardware_hardware_joint_trajectory_controller_on_activate_hardware_hardware_joint_trajectory_controller_set_trajectory:

path:

- x: 1800
- y: 320
- x: 1800
- y: 520

yolo_executor_detections_bounding_box_tracker_detections:

path:

- x: 1240
- y: 780
- x: 1240
- y: 820

bounding_box_tracker_twist_hardware_hardware_ur_impedance_controller_command:

path:

- x: 1760

y: 820

- x: 1760

y: 1200

hardware_hardware_robot_state_broadcaster_cartesian_state_box_collider_target:

path:

- x: 740

y: 940

- x: 740

y: 1360

Machine Learning LeRobot avec SO-ARM101 - Legacy

Essai de déploiement sur Windows via WSL2, Docker, et Dev Container

Pour l'instant pas de test satisfaisant pour l'exécution d'un modèle sur le vrai robot. Passer au WSL2 les ports USB où sont connectés les robots et caméras fait crasher le conteneur. Probablement que la communication série n'est pas supporté.

- Cloner <https://github.com/huggingface/lerobot> dans un conteneur WSL2, par exemple Ubuntu
- Depuis le conteneur Ubuntu, ouvrir un Terminal, se placer dans le répertoire cloné `cd ~/lerobot_devcontainer`, et lancer Visual Studio Code en tapant `code .`
- Ajouter un répertoire `~/lerobot_devcontainer/.devcontainer` et un fichier dedans `~/lerobot_devcontainer/.devcontainer/devcontainer.json` contenant :

```
{
  "build": {
    // Path is relative to the devcontainer.json file.
    "dockerfile": "../docker/lerobot-gpu-dev/Dockerfile"
  }
}
```

- Lancer la commande VSCode : Reopen in container

Tentatives pour faire passer le port série à WSL2 :

```
wsl --shutdown
winget install --interactive --exact dorssel.usbipd-win
usbipd list
wmic diskdrive list brief
wsl --mount \\.\PHYSICALDRIVE1
wsl.exe --version
wsl --mount \\.\PHYSICALDRIVE1 --bare
wsl --mount \\.\PHYSICALDRIVE1 --partition 2 --type ext4
wsl --shutdown
```

```
ipconfig
net localgroup docker-users "gauthier.hentz" /ADD
wsl --set-default ubuntu
wsl --shutdown
usbipd list
usbipd bind --busid 1-1
usbipd list
usbipd attach --wsl --busid 1-1
usbipd attach --wsl --busid 2-1
```

Visualiser et rejouer des DataSets (avant hardware refactor)

- Visualiser un DataSet

```
python lerobot/scripts/visualize_dataset.py --repo-id lerobot/pusht --root ./my_local_data_dir
--local-files-only 1 --episode-index 0
```

```
python lerobot/scripts/visualize_dataset_html.py \
  --repo-id cadene/act_so100_5_lego_test_080000 \
  --local-files-only 1
```

- Rejouer un DataSet (ou une évaluation de modèle) sur le robot

```
python lerobot/scripts/control_robot.py \
  --robot.type=so101 \
  --control.type=replay \
  --control.fps=30 \
  --control.repo_id=cadene/act_so100_5_lego_test_080000 \
  --control.episode=0
```

- Rejouer la Policy `cadene/act_so100_5_lego_test_080000` du modèle ACT pour le SO-ARM101
 - En sauvegardant l'évaluation dans `outputs/eval/act_so100_5_lego_test_080000_haguenau`

```
python lerobot/scripts/control_robot.py \
  --robot.type=so101 \
  --control.type=record \
```

```
--control.fps=30 \  
--control.single_task="Grasp a lego block and put it in the bin." \  
--control.repo_id=outputs/eval/act_so100_5_lego_test_080000_haguenau \  
--control.tags='["tutorial"]' \  
--control.warmup_time_s=5 \  
--control.episode_time_s=30 \  
--control.reset_time_s=30 \  
--control.num_episodes=10 \  
--control.push_to_hub=false \  
--control.policy.path=cadene/act_so100_5_lego_test_080000
```